



SHT-587WS

USER MANUAL

It is important to read the safety precautions, to ensure the user's safety and to prevent potential damage to property. Please read this information carefully for the proper use of the product.



차례

	안전주의사항	2
00	시작하기 명칭과 기능	5
01	전화기능 세대전화 통화하기 관리실 통화하기 공동현관 통화하기	8 10 11
02	통화내역 통화내역 확인하기	13
03	자리비움 자리비움 설정하기 자리비움 해제하기	15 15
04	비상정보 경보 수신기능 비상정보 확인하기	17 17
05	환경설정 벨소리 설정하기 화면 설정하기 비밀번호 설정하기 시간 설정하기	19 20 21 22
06	알아두기 제품정보 상담과 문의 안내 제품보증서	24 24 25

안전주의사항

경고와 주의

※ 제품을 안전하고 정확하게 사용하기 위해 아래 내용에 주의해야 합니다.



• 지시사항을 지키지 않았을 경우, 사용자가 사망하거나 중상을 입을 수 있습니다.



• 지시사항을 지키지 않았을 경우, 사용자의 부상이나 재산 피해가 발생할 수 있습니다.

경고



본 제품을 사용자 임의로 분해, 설치 수리하지 마세요.
- 수리할 필요가 있을 때는 직방 고객센터로 연락하세요.
제품 고장의 원인이 되며, 감전, 화재의 위험이 있습니다.



난로 등의 열기구나 수족관, 가습기 등을 제품 아래 또는 가까이 두지 마세요.
- 화재 및 오작동의 위험이 있습니다.



딱딱한 물건(망치 등)으로 제품에 심한 충격을 주지 마세요.
- 제품이 고장나거나 감전, 화재의 위험이 있습니다.



제품 내부로 물과 같은 액체성분이 들어가지 않도록 하세요.
- 감전, 화재의 위험이 있습니다.



제품에서 이상한 소리, 냄새, 연기가 나면 즉시 제품 뒤에 연결되어있는 어댑터의 AC 코드를 착탈한 후 직방 고객센터로 연락하세요.
- 감전, 화재의 위험이 있습니다.



어린이가 제품의 송수화기 코드를 목에 감거나 장난치지 않도록 하세요.
- 질식으로 사망하거나 상해를 입을 수 있습니다.

안전주의사항



송곳이나 핀 등으로 버튼을 누르거나 구멍으로 삽입하지 마세요.

– 감전, 화재의 위험이 있습니다.



청소시 젖은 헝겊이나 휘발성의 알콜, 벤젠, 신나 등을 사용하지 마세요.

– 감전, 화재의 위험이 있습니다.

주의



모니터화면에 충격을 주지 마세요.

– 본 제품은 터치스크린 모니터로 화면을 강하게 누를 경우 고장 및 파손의 원인이 됩니다.



강한 자력 발생기기를 멀리하세요.

– 대형 TV, 스피커 등을 가까이 두면 제품 성능이 떨어질 수 있습니다.

시작하기

5 명칭과 기능

 
00

시작하기


명칭과 기능

본체

제품의 전면

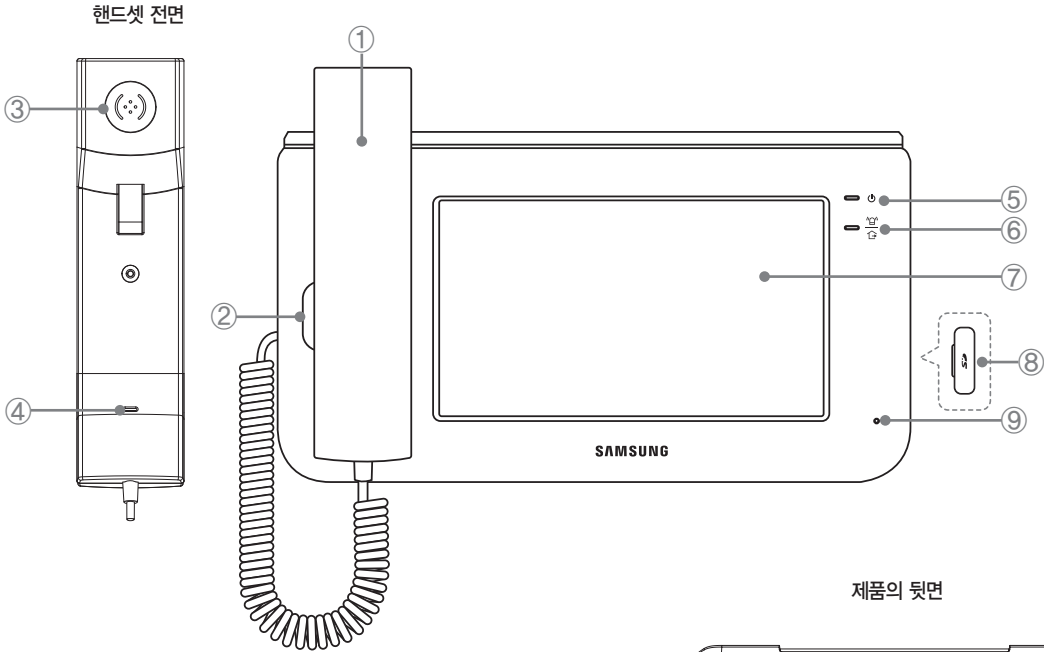

제품의 뒷면

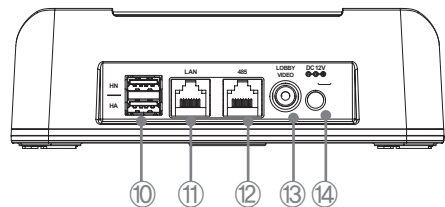 

- ※ 본 제품의 색상과 무늬는 변경될 수 있습니다.
- ※ 본 제품에서는 SD카드, USB 기능은 제공하지 않습니다.
- ※ HA, HN, LAN 포트는 일반 사용자가 사용하지 않는 포트입니다.

- ① 송·수화기
통화할 때 사용합니다.
- ② 본체 스피커
방문자 확인 및 전화/화상 통화 시 사용합니다.
- ③ 핸드셋 스피커
방문자 확인 및 전화/화상 통화 시 사용합니다.
- ④ 마이크
방문자 확인 및 전화/화상 통화 시 사용합니다.
- ⑤ 전원
전원상태를 표시합니다. (평상시 점등됩니다.)
- ⑥ 부재/비상
자리비움 설정시 점등되고, 세대/공동현관 비상
상황 발생 시 점멸합니다.

- ⑦ LCD 화면(터치 스크린)
각종 정보를 표시하고 화면의 아이콘이나 버튼 등을 직접
클릭하여 선택/실행할 수 있습니다.
- ⑧ SD카드단자
- ⑨ 마이크
방문자 확인 및 전화/화상 통화 시 사용합니다.
- ⑩ USB 연결단자
- ⑪ LAN 연결단자
- ⑫ 무인경비 시스템 연결단자
- ⑬ 공동현관기 영상 입력단자
- ⑭ 전원 연결단자 (DC 12V, 2.5A)

기본화면

※ 단지 내의 상황과 사용 소프트웨어에 따라 변경될 수 있습니다.



상태표시 아이콘



주장치와 통신상태에 이상이 있으면 표시됩니다.

메인 메뉴

	세대통화	아파트에 전화를 걸 수 있습니다.
	관리실	경비실 또는 관리실에 전화를 걸 수 있습니다.
	공동현관	공동현관 방문자를 확인하거나 통화할 수 있습니다.
	자리비움	자리비움 상태를 설정 및 해제할 수 있습니다.
	비상정보	비상내역을 확인할 수 있습니다.

바로가기 메뉴

	통화내역을 확인할 수 있습니다.
	벨소리, 화면, 비밀번호 등을 설정할 수 있습니다.
	제품이 설치된 경비실 위치를 보여줍니다.
	미확인 비상 내역이 표시됩니다.

전화기능

- 8 세대전화 통화하기
- 10 관리실 통화하기
- 11 공동현관 통화하기

01

전화기능

세대전화 통화하기

세대에 전화를 걸려면

 
1 초기화면에서 [세대전화]를 클릭하면 세대전화 화면이 표시됩니다.



2 숫자[0~9], [동] 및 [호]를 이용하여 동, 호수를 입력한 후, [호]를 클릭합니다.



3 상대방이 응답하면 통화합니다.

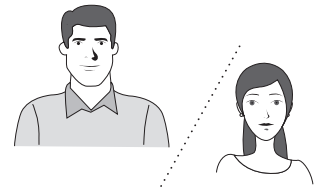

* 동번호 → [동] → 호번호 → [호] 아이콘을 누르면 됩니다.

* 통화시간은 최대 60분입니다.

* 버튼 입력시 [←]를 클릭하면 뒤에서부터 숫자를 하나씩 지울 수 있습니다.

4 [호]를 클릭하면 통화가 종료됩니다.



벨소리와 통화 음량 조절하기

벨이 울릴때는 벨소리 음량을, 통화중에는 통화음량을 조절할 수 있습니다.



볼륨조절은 0~7단계까지 가능합니다.

세대에서 전화가 오면

 
1 세대전화 착신벨이 울리고 세대전화 화면이 표시됩니다.



2 [호]를 클릭합니다.



3 통화합니다.

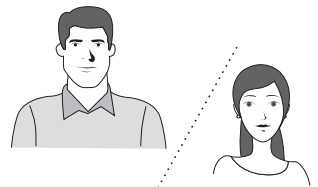

* 통화시간은 최대 60분입니다.

4 [호]를 클릭하면 통화가 종료됩니다.



세대전화 통화하기

통화목록을 이용해 전화를 걸려면

1 초기화면에서 [세대전화]를 클릭하면 세대전화 화면이 표시됩니다.



2 숫자 입력창의 [▼] 아이콘을 누르면 최근통화목록이 표시됩니다.



 
3 원하는 통화목록을 선택합니다.



4 [☎]를 클릭합니다.



5 상대방이 응답하면 통화합니다.

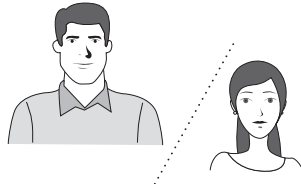

* 통화시간은 최대 60분입니다.

6 [☎]를 클릭하면 통화가 종료됩니다.



세대와 통화중 다른 세대로 통화를 전환하려면

 
1 세대전화 착신벨이 울리고 세대전화 화면이 표시됩니다.



2 [☎]를 클릭합니다.



3 통화합니다.

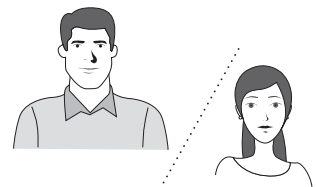

* 통화시간은 최대 60분입니다.

4 통화를 전환하고자 하는 다른 세대 번호를 입력합니다.



5 [☎]를 클릭합니다.



6 전환이 완료되면 통화는 자동 종료됩니다.



관리실 통화하기

※ 경비실도 동일하게 동작합니다.

관리실에 전화를 걸려면

 
1 초기화면에서 [관리실]을 클릭하면 관리실 화면이 표시됩니다.



2 숫자[0~9], [관리실]을 이용하여 관리실 또는 경비실 번호를 입력 후 [☎]를 클릭합니다.



3 상대방이 응답하면 통화합니다.

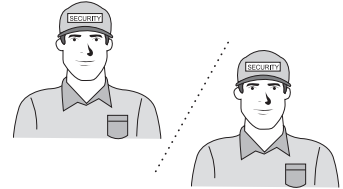

4 [☎]를 클릭하면 통화가 종료됩니다.

 


관리실에서 전화가 오면


1 관리실 착신벨이 울리고 관리실 전화 화면이 표시됩니다.



2 [☎]를 클릭합니다.

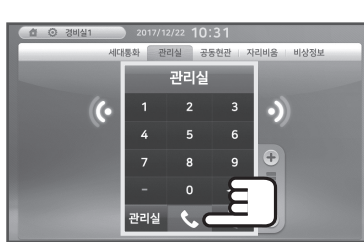

3 통화합니다.

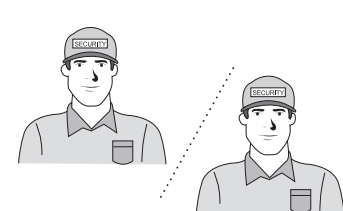 

4 [☎]를 클릭하면 통화가 종료됩니다.



공동현관 통화하기

공동현관에 전화를 걸려면

1 초기화면에서 [공동현관]을 클릭하면 공동현관 통화 화면이 표시됩니다.



2 숫자[0~9], [동] 및 [호]를 이용하여 동, 호를 입력한 후, [호]를 클릭합니다.



3 호출한 공동현관의 영상이 보이고 통화가 자동 연결됩니다.



* 동번호 → → 호번호를 누르면 됩니다.

* 버튼 입력시 [←]을 클릭하면 뒤에서부터 숫자를 하나씩 지울 수 있습니다.

* 통화시간은 최대 60분입니다.

4 [호]를 클릭하면 통화가 종료됩니다.



벨소리와 통화 음량 조절하기

벨이 울릴때는 벨소리 음량을, 통화중에는 통화음량을 조절할 수 있습니다.



볼륨조절은 0~7단계까지 가능합니다.

공동현관에 방문객이 찾아오면

 
1 공동현관 벨이 울리고 화면에 방문객이 보여집니다.



2 [호]를 클릭합니다.



3 방문객과 통화합니다.

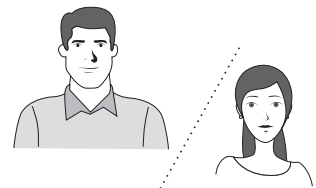

* 통화시간은 최대 1분입니다.

4 [호]를 클릭하면 통화가 종료됩니다.



공동현관 문 열어주기

• 화면의 [문열림] 버튼을 누르면 공동현관 문을 열어줄 수 있습니다.

통화내역

13 통화내역 확인하기

 
02

통화내역

통화내역 확인하기

통화내역을 조회하려면

- 1 초기화면에서 [통화내역]를 클릭하면
통화내역 화면이 표시됩니다.
- 2 착/발신 또는 부재중전화 내역
화면이 표시됩니다.
- 3 통화내역에서 [] 버튼을
누르면 해당 번호로 발신을 합니다.

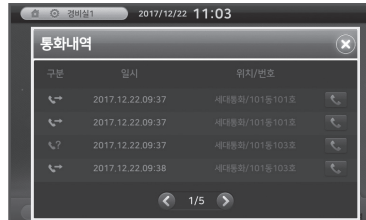

* [< / >]를 클릭하면 다른 목록을 확인할 수 있습니다.

자리비움

15 자리비움 설정하기

15 자리비움 해제하기

03

자리비움

 
자리비움 설정하기

자리비움을 설정하려면

1 초기화면에서 [자리비움]을 클릭하면 자리비움 화면이 표시됩니다.



2 [◀/▶]를 이용하여 대체 연락처를 선택한 후 [확인]을 클릭합니다.

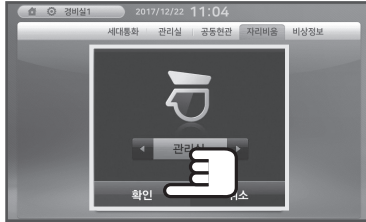


3 비밀번호를 입력하고 [확인]을 클릭합니다.



* "비밀번호 사용 안함"으로 선택한 경우에는 비밀번호 입력창이 표시되지 않습니다. (21페이지 참고)

 4 자리비움 설정이 완료되면 자리비움 팝업이 표시됩니다.

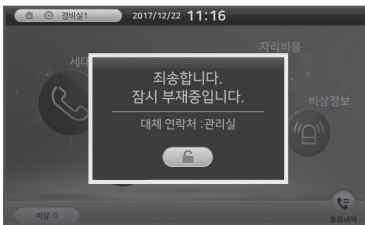


자리비움 설정 오류 발생 시

- 연결할 경비실을 잘못 입력했거나 네트워크 연결 이상이 있을 경우에는 화면에 표시되는 확인사항을 점검한 후, 다시 입력하십시오. (표시되는 확인사항의 예) "등록된 경비실이 아닙니다."
- 자리비움 설정 상태에서 걸려 온 모든 전화는 설정된 경비실로 전환 연결됩니다.


자리비움 해제하기

자리비움을 해제하려면

 1 초기화면의 자리비움 팝업의 [🔒]을 클릭합니다.

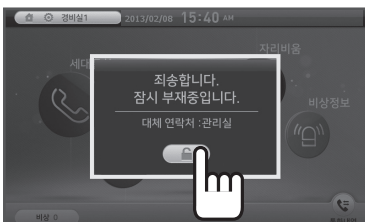

2 자리비움 해제여부를 확인하는 팝업창에서 [예]를 클릭합니다.

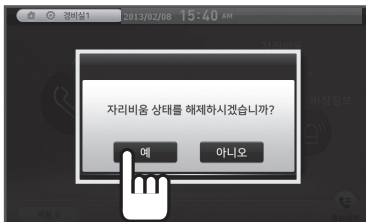 

3 자리비움 팝업이 닫히며 자리비움 상태가 해제됩니다.



비상정보

17 경보 수신기능

17 비상정보 확인하기

 
04

비상정보

경보 수신기능

경보 상황이 수신되면


1 경보 상황이 수신되면 해당 메시지 화면이 표시 되고 해당 경보 상황을 방송합니다.

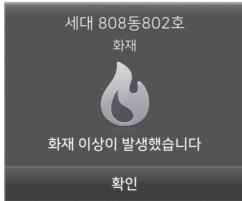

2 화면의 [확인] 버튼을 누릅니다.



 * 해당 경보 수신 화면을 닫습니다.

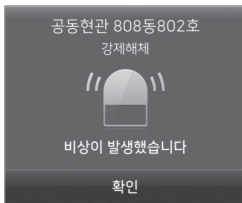


비상정보 확인하기

비상정보를 확인하려면

1 초기화면에서 [비상정보]를 클릭하면 비상정보 화면이 표시됩니다.



 2 세대/공동현관 비상정보를 확인할 수 있습니다.

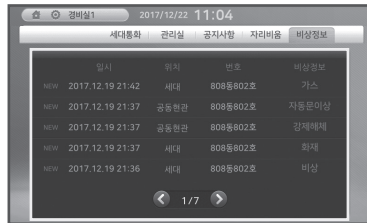

* 미확인 비상 발생사항이 있으면 화면 하단의 "비상" 개수가 표시됩니다. 이때 [비상] 아이콘을 클릭하면 비상정보 화면이 표시됩니다.

* [</>]를 클릭하면 다른 목록을 확인할 수 있습니다.

환경설정

- 19 벨소리 설정하기
- 20 화면 설정하기
- 21 비밀번호 설정하기
- 22 시간 설정하기

05

환경설정

벨소리 설정하기

벨소리/벨음량을 설정하려면

1 초기화면에서 []을 클릭하면 설정 화면이 표시됩니다.



2 [벨소리]를 클릭하면 벨소리 설정 화면이 표시됩니다.



 
3 원하는 “벨종류”를 선택합니다.



4 [◀/▶]를 이용하여 벨소리를 선택합니다.



5 [◀/▶]를 클릭하여 벨음량을 조절한 후 [저장]을 누릅니다.

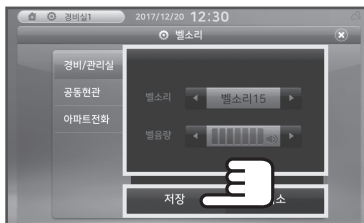

* 벨종류는 벨소리 21개 중에서 선택할 수 있습니다.

* 벨음량 기본값은 '3'입니다.

* [취소] 아이콘을 클릭하면 설정사항이 취소됩니다.

화면 설정하기

화면을 설정하려면

1 초기화면에서 []을 클릭하면 설정 화면이 표시됩니다.



2 [화면]을 클릭하면 화면설정이 표시됩니다.



3 화면설정 메뉴에서 변경하고자 하는 항목을 선택합니다.



자동절전기능

[</>]을 클릭하여 LCD화면의 자동절전시간을 조절합니다.



* '화면 자동절전시간'을 설정하면 지정한 시간내에 아무런 동작이 없을 경우, 화면이 자동으로 꺼집니다.

 
화면밝기

[</>]를 클릭하여 LCD화면의 밝기를 조절합니다.



화면청소

[화면청소]를 클릭하면 15초 동안 터치 동작하지 않으므로 LCD 청소를 할 수 있습니다.

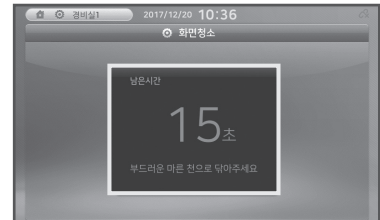

* 15초 후에는 터치가 정상적으로 동작합니다.

터치보정

[터치보정]을 클릭하면 LCD화면 터치보정을 할 수 있습니다.



비밀번호 설정하기

비밀번호를 설정하려면

※ 비밀번호는 자리비움 설정시 사용됩니다.

1 초기화면에서 []을 클릭하면 설정 화면이 표시됩니다.



2 [비밀번호]를 클릭하면 비밀번호설정 화면이 표시됩니다.



3 비밀번호를 입력한 후, 동일한 번호로 재확인을 입력합니다.



4 [확인]을 클릭하면 변경된 비밀번호가 저장됩니다.



* 비밀번호 사용여부를 클릭하면 자리비움 설정시 비밀번호를 입력해야 합니다.

시간 설정하기

시간을 설정하려면

 
1 초기화면에서 []을 클릭하면 설정 화면이 표시됩니다.




2 [시간]을 클릭하면 시간설정 화면이 표시됩니다.



3 날짜 또는 시간을 클릭하여 현재 시간을 설정합니다.

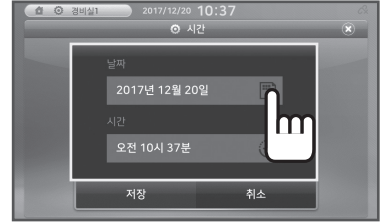

4 [저장]버튼을 클릭하면 설정사항이 저장됩니다.

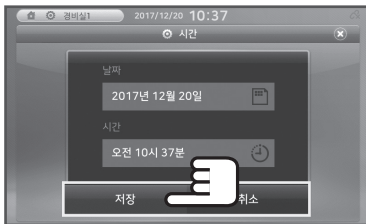 

알아두기

- 24 제품정보
- 24 상담과 문의 안내
- 25 제품보증서

06

알아두기

제품정보

제품규격

항 목	단 위	규 격
공급 전원	V	DC 12V, 2.5A
동작 온도	℃	-10℃ ~ +45℃
동작 습도	%	10% ~ 90%
무 게	Kg	1.07Kg
크기 (가로×세로×높이)	mm	255 x 141 x 133

사용자 안내문

A급 기기 (업무용 방송통신기기)

이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

제품을 장기간 사용 시 습기, 먼지 등으로 인해 화재 및 고장 등을 초래할 수 있습니다.
권장 점검 주기 내 점검을 받으시기 바랍니다. (권장 점검주기 5년)

상담과 문의 안내

〈제품 상담 및 A/S〉

1588-4141

〈홈페이지〉

 
<https://homeiot.zigbang.com>

※ 본 제품의 보증기간은 구입일로부터 1년 입니다.

제 품 보 증 서

서비스에 대하여

- 주식회사 직방에서는 품목별 소비자 분쟁해결기준(공정거래위원회 고시)에 따라 아래와 같이 제품에 대한 보증을 실시합니다.
- 제품 고장발생시 구입 대리점으로 연락하십시오.
(대리점 이용이 안될 경우 직방 고객센터로 연락바랍니다.)

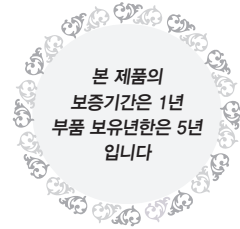

제 품 명		모 델 명	
구 입 일	년 월 일	Serial No.	
구 입 처		판 매 금 액	

무로서비스

구입 후 1년(제품 보증기간) 이내에 제품이 고장난 경우에만 무상 서비스를 받을 수 있습니다.
※ 일반 제품을 영업용으로 전환하여 사용할 경우의 보증기간은 반으로 단축 적용됩니다.

소비자 피해 유형		보상 내용	
		보증기간이내	보증기간이후
정상적인 사용조건에서 성능, 기능상의 고장 발생	구입 후 10일 이내 중요 이상 발생시	교환 또는 환불	해당없음
	구입 후 1개월 이내에 중요 이상 발생시	제품교환 또는 무상수리	
	수리 가능	동일 하자로 2회까지 고장 발생시	유상수리
		동일 하자로 3회까지 고장 발생시	
		서로 다른 하자로 5회까지 고장 발생시	
	수리 불가능	수리용 부품은 있으나 수리 불가능시	정액 감가 상각 후 교환
		수리용 부품이 없어 수리 불가능시 (부품보유기간 이내)	정액 감가 상각한 잔여 금액에 구입가의 5%를 가산하여 환불
소비자의 고의, 과실로 인한 고장 발생	수리가 불가능한 경우	유상수리에 해당하는 금액징수 후 제품교환	유상수리 금액징수 후 감가상각적용 제품교환
	수리가 가능한 경우	유상수리	유상수리

유로서비스

1) 고장이 아닌 경우

고장이 아닌 경우 서비스를 요청하면 요금을 받게 되므로 반드시 취급설명서를 읽어 주세요.
(수리가 불가능한 경우 별도 기준에 준함)

- 제품 가능 사용설명
- 외부안테나 및 유선신호 관련 서비스 요청 시
- 제품의 이동, 이사 등으로 인한 설치 부실 시
- 고객이 설치한 제품의 설치 미숙으로 인한 방문 시
- 사용방법 (비밀번호, 카드, 리모콘 등록방법 등) 미숙지로 인한 외부 조정 시
- 제품내부에 외부 이물질 (커피, 우유, 음료수, 물 등)이 유입되어 고장이 발생한 경우
- 네트워크 및 타사 프로그램 사용설명 시
- 판매점에서 제품을 부실하게 설치해 주어 재설치 시 (단, 직방 판매 및 서비스지정점에서 구입한 제품의 경우는 제외)

2) 소비자 과실로 고장난 경우

- 소비자의 취급 부주의 또는 함부로 수리, 개조하여 고장 발생시
- 외부 충격이나 떨어뜨림 등에 의해 고장이나 손상이 난 경우
- 당사에서 인가한 대리점이나 직방 고객센터 기사가 아닌 사람이 수리하여 고장 발생시
- 전기용량을 틀리게 사용하여 고장 발생시
- 설치 후 이동시 떨어뜨림 등에 의한 고장, 손상 발생시
- 당사에서 미지정한 소모품 및 옵션품 사용으로 고장 발생시
- 취급설명서 내 "주의사항"을 지키지 않아 고장이 난 경우

3) 그밖의 경우

- 천재지변 (낙뢰, 화재, 염해, 수해 등)에 의한 고장 발생시
- 충격전압으로 보호할 수 없는 불안정한 전원에서 사용한 경우
- 소모성 부품의 수명이 다한 경우 (배터리 등)

이 보증서는 국내(대한민국)에서만 사용되며 다시 발행하지 않으므로 취급설명서와 함께 잘 보관해 주세요.

目录

	安全注意事项	28
00	在您阅读前 部件及功能	31
01	通话功能 如何使用小区内通话 如何使用管理室通话 如何查看公共门厅	34 36 37
02	通话记录 查看通话记录	39
03	外出 如何设置外出 如何解除外出	41 41
04	紧急信息 警报接收功能 如何检查居家紧急信息	43 43
05	配置设置 设置铃声 设置画面 设置密码 设置时间	45 46 47 48
06	实用信息 产品信息 欲了解更多信息	50 50

安全注意事项

警告及注意

※ 为安全正确地使用本产品，请注意下列事项。



不遵守注意事项，用户可能受伤会发生财产损失。



不遵守注意事项可能造成用户死亡或重伤。

警告



用户不得任意拆开，设定及维修本品。

- 需要维修时请与客服中心联系。
- 已发生故障的产品有发生触电及火灾的危险。



请勿将本品放置在电暖器等发热物体，或者放置于鱼缸、加湿器等产品下方及附近。

- 有火灾危险，产品可能无法正常工作。



请勿用坚硬物体（锤子等）敲击本产品。

- 产品有发生故障和触电的危险。



请注意不要将水等其他液体溅入本产品。

- 有触电和火灾危险。



产品发出异常声响、发生异味或烟气时，立刻切断电源开关（连接HA产品）后与客服中心取得联。

- 有触电和火灾危险。



打扫门厅时，请注意不要将水溅入摄像机。

- 有触电和火灾危险。

安全注意事项



请勿用锤子或别针等尖锐物品按压本产品，或者将其塞入本产品。

- 有触电和火灾危险。



清扫时，避免用湿布或挥发性溶剂酒精、苯、稀料等清洁产品。

- 有触电和火灾危险。

注意



请勿向显示器表面施力。

- 本品为触摸式画面，过于用力会发生画面故障或破坏产品。



请远离产生强磁场的电器设备。

- 大型电视，音响等放在附近时有可能降低产品性能。

在您阅读前

31 部件及功能

 
00

在您阅读前


部件及功能

主体


听筒前视图

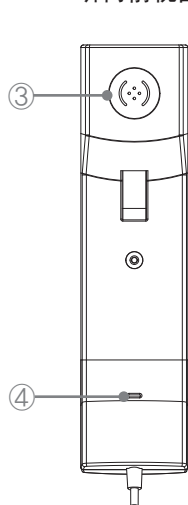

产品前视图

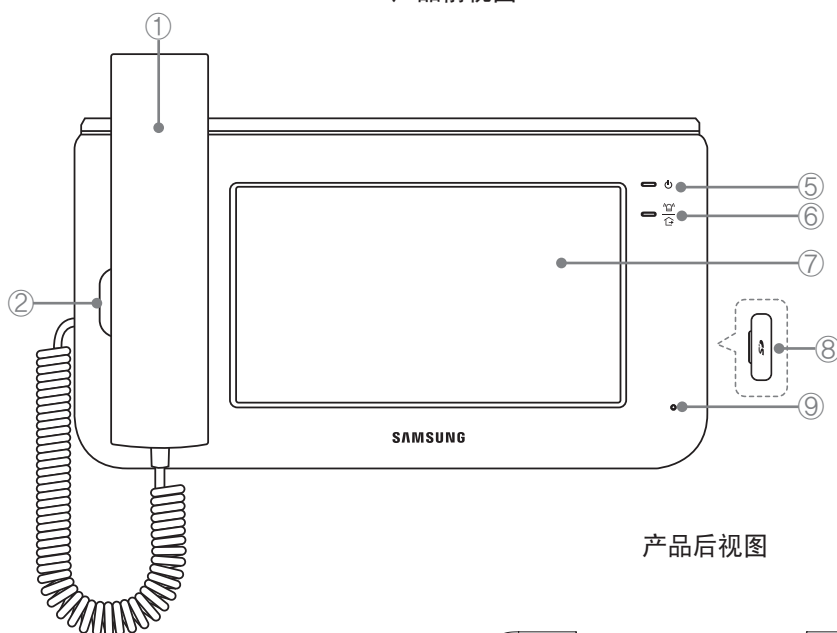 

产品后视图

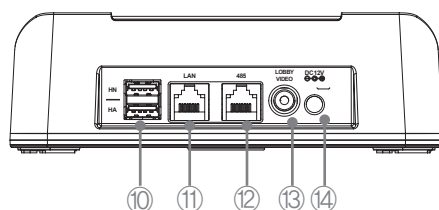 

- ※ 本产品颜色及图案随时可能有变动。
- ※ 本产品不具备SD 卡或 USB 快闪磁碟存取功能，SD卡或是无人职守的安全系统公共门厅视频输入端子功能。
- ※ HA、HN、LAN端口不属于用户通常使用的端口。

- | | |
|--|--|
| <p>① 听筒
用于使用通话。</p> <p>② 主体扬声器
用于访客检查，呼叫，视频通话。</p> <p>③ 听筒扬声器
用于访客检查，呼叫，视频通话。</p> <p>④ 扩音器
用于访客检查，呼叫，视频通话。</p> <p>⑤ 功率
用于指示电源供电状态。（0n为当供电正常时）。</p> <p>⑥ 外出/紧急
当外出模式设置时灯会亮起，并且当居家紧急状况发生时闪烁。</p> | <p>⑦ 液晶屏（触摸屏）
用于显示信息并直接选择，单击，然后执行屏幕上的图标和按钮。</p> <p>⑧ SD卡终端</p> <p>⑨ 扩音器
用于访客检查，呼叫，视频通话。</p> <p>⑩ USB连接端子</p> <p>⑪ LAN连接端子</p> <p>⑫ 无人职守的安全系统连接端子</p> <p>⑬ 无人职守的安全系统公共门厅视频输入端子</p> <p>⑭ 电源连接器（DC 12V, 2.5A）</p> |
|--|--|

主屏幕



状态显示图标

	表示网络连接状态。(当出现故障时，则指出。)
--	------------------------

主选单

	小区内通话	可进行小区内通话。
	管理室	您可拨打普通电话至管理室。
	公告事项	可从管理室检查通知。
	外出	外出状态可以设置及关闭。
	紧急信息	用于显示详细紧急信息。

快捷键

	通话记录	可确认收发信息及未接来电内容。
	如何配置设置	用于设置铃声，屏幕和密码。
	门卫室1	安装本产品在安全管理室。
	紧急 0	显示尚未确认的紧急信息。

通话功能

- 34 如何使用小区内通话
- 36 如何使用管理室通话
- 37 如何查看公共门厅

01

通话功能

如何使用小区内通话

 
使用小区内通话

- 1

当点击主画面上的[小区内通话]时，小区内通话画面会出现。
- 2

输入楼号、门牌号码后点击[]，以选择数字[0~9]，[楼]及[号]。
- 3

当接收到回应时，您就可开始电话交谈。

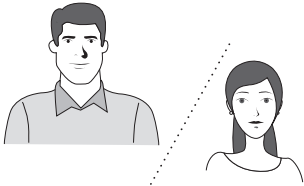

- * 按下图标顺序:大楼号码→[楼]→门牌号码[号]。
- * 当输入数字按钮时，按下[←]以从后面消除每个数字。
- * 通话持续时间长达60分钟。
- * 如果对口有摄影机，对应的视频将被显示。

- 4
- 点击[]终止通话。



 调整铃声和通话音量

当铃声响时铃声音量可以调节，及当电话通话中时通话音量可以调节。



调节高音量



调节低音量

音量控制可在0~7级之间调节。

 
当小区内电话来电

- 1

铃声为小区内通话铃响及小区内画面会显示在屏幕上。
- 2

点击[]。
- 3

开始通话中。

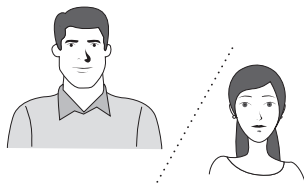

- * 通话持续时间长达60分钟。

- 4
- 点击[]终止通话。



 
如何使用小区内通话

要使用最近通话纪录

- 1 当点击主画面[小区内通话]时，小区通话画面会显示。
- 2 点击在数字键盘上的[☑]图标来显示最近通话记录。
- 3 从最近通话记录中选择所需的号码。




- 4 点击[☎]。
- 5 当接收到回应时，您就可开始电话交谈。
- 6 点击[挂断]终止通话。

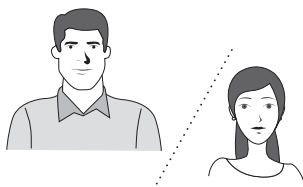

- * 通话持续时间长达60分钟。
- * 如果对口有摄影机，对应的视频将被显示。

通话中，需与其他小区住户通话时

 - 1 来电铃声响，同时小区通话画面会显示。
- 2 点击[☎]。
- 3 开始通话中。

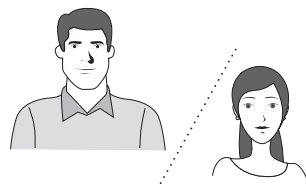

- * 通话持续时间长达60分钟。

- 4 输入需通话的住户号码。
- 5 点击[☎]。
- 6 转换成功时，之前的通话自动终止。

 


如何使用管理室通话

※ 工作方式与安全管理室相同。

使用管理室通话

- 1 当点击主画面[管理室]时，
小区通话画面会显示。
- 2 请用数字[0~9]及[管理室]来输入管理
室或门卫室号码后点击[]按钮。
- 3 当接收到回应时，您就可开始电话
交谈。

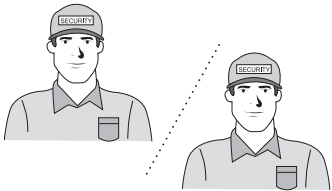


- 4 点击[]终止通话。



从管理室来电时

 - 1 管理室铃响时及管理室通话画面
会显示在屏幕上。
- 2 点击[]。
- 3 开始通话中。

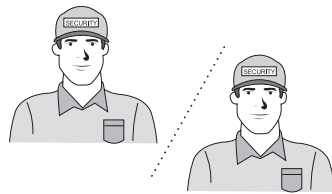

- 4 点击[]终止通话。



如何查看公共门厅

需要接通公共门厅电话时

1

当点击主画面[公共门厅]时，公共门厅通话画面会显示。



2

请用数字[0~9]及[栋]来输入栋、号后点击[]按钮。



* 请按下栋号 → [栋] → 号即可。

* 点击数字键盘[←]图标，可从末尾数字开始删除。

3

画面将显示公共门厅视频，自动拨通电话。



* 最大通话时间为60分钟。

4

点击[]终止通话。



 调整铃声和通话音量

当铃声响起时铃声音量可以调节，及当电话通话中时通话音量可以调节。



调节高音

调节低音

音量控制在0~7级之间调节。

当访客来到公共门厅

1

公共门厅铃声响起且访客图像显示在屏幕上。



 
2

点击[]。



3

与访客开始电话交谈。

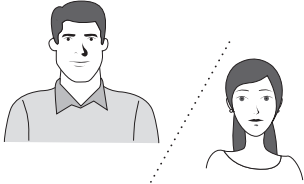

* 通话最长持续时间为1分钟。

4

点击[]终止通话。



 如何打开公共门厅大门

- 当您按下屏幕上[开门]按钮，您就可以打开公共门厅大门。

通话记录

39 查看通话记录

02

通话记录

查看通话记录

若要查看通话记录

- 1

初始画面中点击[], 即可显示通话记录信息。
- 2

显示收发信息及未接来电内容。
- 3

点击通话记录中的[]按钮, 即向该号码拨打电话。



* 点击[< / >], 可确认其他目录。

外出

41 如何设置外出

41 如何解除外出

03

外出

如何设置外出

设置外出

1 当按下主画面[外出], 外出画面会显示。



2 使用[◀/▶]选择其他联系方式, 然后点击[确认]。



3 输入您的密码并点击[确认]。



* 若选择[不使用密码], 密码输入视窗不会显示。(请参阅第47页)

4 外出设置完成后即会弹出外出界面。



当错误发生在外出设置

- 当您因失误接收到错误的门卫室, 或者是网路连接错误, 请检查, 当您输入细节及再次输入讯息会显示什么。显示例句为: [请再检查输入数字]或[请检查您的网路状态]。
- 所有的小区内通话因外出模式设置而将被转接到设定的门卫室。发生紧急情况时, 所有门卫室设置为接收, 包括未参与门卫室将被告知, 在紧急情况下将显示。

如何解除外出

解除外出

1 点击[]主画面外出弹出视窗。



2 点击[是], 在外出弹出视窗撤消。



3 外出弹出视窗关闭及外出状态关闭。



紧急信息

43 警报接收功能

43 如何检查居家紧急信息

04

紧急信息

警报接收功能

当警报情况报道

- 1

当警报状况报告会出现相应的讯息及转播状况。
- 2

点击屏幕上的[确认]键。



* 关闭相应警报报告画面。



如何检查居家紧急信息

检查居家紧急信息

- 1

点击主画面上[紧急信息]，紧急信息画面会显示。
- 2

可以检查居家紧急信息。



- * 如果有未确认的紧急信息时，屏幕下方显示“紧急”个数。此时点击[紧急]图标，可查看紧急信息。
- * 点击[< / >]以查看其他目录。

配置设置

45 设置铃声

46 设置画面

47 设置密码

48 设置时间

05

配置设置

设置铃声

如何设置铃声/音量

1 点击主画面[], 设置画面会出现。



2 点击[铃声]，铃声设置画面会出现。



3 选择所需的[铃声类型]。



4 使用[◀/▶]选择铃声。



5 点击[◀/▶]及按下[储存]来调节声音音量。



* 您可以从21种铃声选择。

* 铃声音量默认值为‘3’。

* 当您点击[取消]图标，设置将被取消。

设置画面

如何设置画面

- 1

点击主画面[]，设置画面会出现。
- 2

点击[画面]即会显示画面设置界面。
- 3

请在画面设置菜单上选择所要更改的项目。



自动节电功能

点击[◀/▶]可调节液晶屏幕省电持续时间。



* 当自动省电时间设定时，若没有在设置时间内采取任何行动，屏幕会自动解除。

画面亮度

点击[◀/▶]可调节液晶屏幕亮度。



屏幕清洁

按下[屏幕清洁]键，触摸功能将被停止15秒，使液晶屏幕可清洁。



* 点击功能将在15秒后恢复正常。

触摸校准

点击[触摸校准]以触摸及校正液晶屏幕。



设置密码

如何设置密码

* 外出设置时需要使用密码。

1 点击主画面[], 设置画面会出现。



2 当点击[密码], 密码设置画面会出现。



3 输入密码后, 必须输入相同数字确认。



* 您点击使用密码时, 必须输入已登录密码, 当您设置外出功能时。

4 点击[确认], 新变更的密码将被储存。



设置时间

如何设置时间

1 点击主画面[], 设置画面会出现。



2 点击[时间]，会显示时间设置画面。



3 点击日期或时间来设置当前时间。



4 点击[保存]按钮即会保存设置内容。



实用信息

50 产品信息

50 欲了解更多信息

06

实用信息

产品信息

产品规格

类别	单位	规格
电源供应器	V	DC 12V, 2.5A
操作温度	℃	-10℃ ~ +45℃
操作湿度	%	10% ~ 90%
重量	公斤	1.07公斤
尺寸（宽x高x深）	毫米	255 x 141 x 133

欲了解更多信息

<网站>

<https://homeiot.zigbang.com>

※ 本产品从购买之日起保修期为一年。



配件名称	有毒有害物质或元素					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
金属配件	○	○	○	X	○	○
印刷电路组件 (Printed Board Assembly)	X	○	○	○	○	○
电缆 (Cable)	X	○	○	○	○	○
塑料配件(Plastic)	○	○	○	○	○	○

X: 配件中有毒有害物质含量超过<含量限制标准 GB/T 26572>所规定的标准值

上述表说明本产品所含的有害物质含量信息，各配件的有害物质信息是根据合作公司所提供的信息和内部鉴定结果来制成的。部分配件所含的有害物质，按照现在的技术水准是很难代替，为了代替这个问题直帮株式会社会竭尽全力去努力的。

目錄

	安全注意事項	54
00	在您閱讀前 零件及功能	57
01	通話功能 如何使用社區內通話 如何使用管理室通話 如何查看社區門口機	60 62 63
02	通話記錄 正在檢查通話記錄	65
03	外出 如何設定外出 如何解除外出	67 67
04	緊急訊息 警報接收功能 如何檢查居家緊急訊息	69 69
05	配置設定 設置鈴聲 設置畫面 設置密碼 設定時間	71 72 73 84
06	實用訊息 產品訊息 欲了解更多訊息	76 76

安全注意事項

警告及注意

※ 為安全正確地使用本產品，請注意下列事項。



不遵守注意事項、用戶可能受傷會發生財產損失。



不遵守注意事項可能造成用戶死亡或重傷。

警告



用戶不得任意拆開、設定及維修本品。

- 需要維修時請與客服中心聯繫。
- 已發生故障的產品有發生觸電及火災的危險。



請勿將本品放置在電暖器等發熱物體、或者放置於魚缸、加濕器等產品下方及附近。

- 有火災危險，產品可能無法正常工作。



請勿用堅硬物體（錘子等）敲擊本產品。

- 產品有發生故障和觸電的危險。



請注意不要將水等其他液體濺入本產品。

- 有觸電和火災危險。



產品發出異常聲響、發生異味或煙氣時、立刻切斷電源開關（連接HA產品）後與客服中心取得聯繫。

- 有觸電和火災危險。



打掃玄關時、請注意不要將水濺入攝像機。

- 有觸電和火災危險。

安全注意事項



請勿用錘子或別針等尖銳物品按壓本產品、或者將其塞入本產品。

- 有觸電和火災危險。



清掃時，避免用濕布或揮發性溶劑酒精、苯、稀料等清潔產品。

- 有觸電和火災危險。

注意



請勿向顯示器表面施力。

- 本品為觸控式畫面、過於用力會發生畫面故障或破壞產品。



請遠離產生強磁場的電器設備。

- 大型電視、音響等放在附近時有可能降低產品性能。

在您閱讀前

57 零件及功能

 
00

在您閱讀前


零件及功能

主體


話筒前視圖

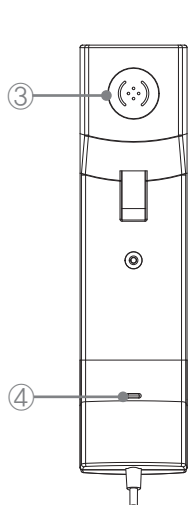

產品前視圖

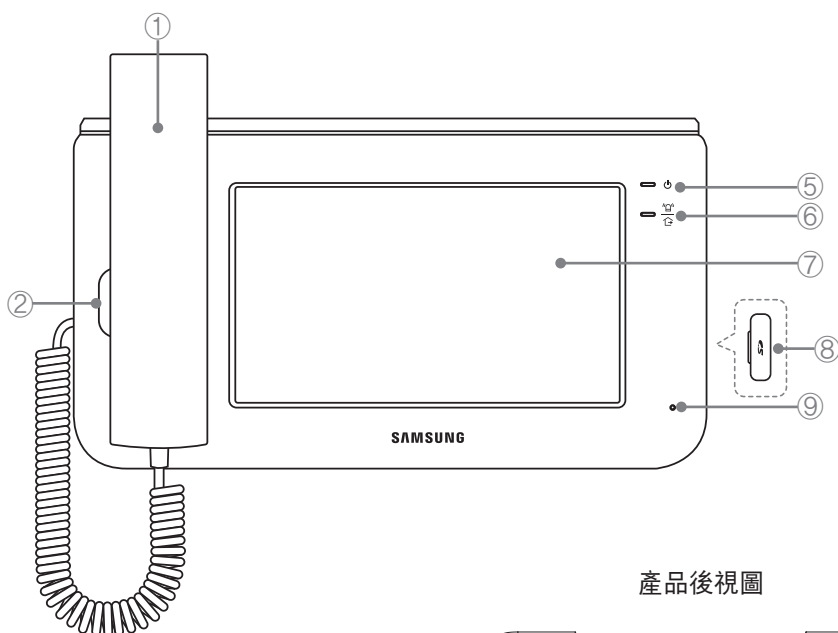 

產品後視圖

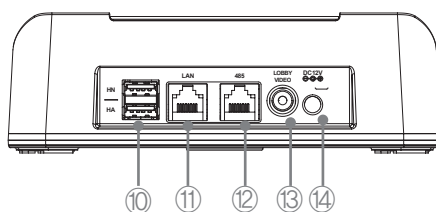 

- ※ 本產品顏色及圖案隨時可能有變動。
- ※ 本產品不具備 SD 卡或 USB 快閃磁碟存取功能。
- ※ HA、HN、LAN埠是一般使用者所不會用到的連接埠。

- ① 話筒
用於使用通話。
- ② 主體揚聲器
用於訪客確認，呼叫及視訊通話。
- ③ 話筒揚聲器
用於訪客確認，呼叫及視訊通話。
- ④ 擴音機
用於訪客確認，呼叫及視訊通話。
- ⑤ 功率
用於指示電源供電狀態。(On為當供電正常時)。
- ⑥ 外出/緊急
當外出模式設置時燈會亮起，並且當住家緊急狀況發生時閃爍。
- ⑦ 液晶面板 (觸控面板)
用於顯示訊息並直接選擇，點擊，然後執行面板上的圖示及按鈕。
- ⑧ SD卡終端
- ⑨ 擴音機
用於訪客確認，呼叫及視訊通話。
- ⑩ USB連接端子
- ⑪ LAN連接端子
- ⑫ 電話連接端子
- ⑬ 無人職守的保全系統連接端子
- ⑭ 電源連接器 (DC 12V, 2.5A)

主要畫面



狀態顯示圖示



表示網路連接狀態。(當出現故障時，則指出。)

主選單

	社區內通話	可進行社區內通話。
	管理室	您可撥打電話至管理室。
	通知事項	可從管理室檢查通知。
	外出	外出狀態可以設置及關閉。
	緊急訊息	用於顯示詳細緊急訊息。

快捷鍵

	通話記錄	您可以查看已接聽、已撥打和漏接的電話。
	如何配置設定	用於設定鈴聲，螢幕及密碼。
	警衛室1	安裝本產品在保全管理室。
	緊急 0	它會顯示未確認之緊急狀況詳細資料。

通話功能

- 60 如何使用社區內通話
- 62 如何使用管理室通話
- 63 如何查看社區門口機

01

通話功能

如何使用社區內通話

使用社區內通話

 
1 當按下主畫面上的[社區內通話]時，社區內通話畫面會出現。



2 輸入樓號、門牌號碼後按[]，以選擇數字 [0~9]，[樓]及[號]。



3 當接收到回應時，您就可開始電話交談。

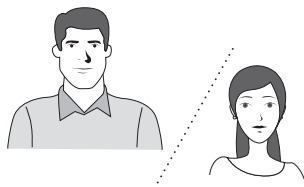

- * 按下圖示依順序：大樓號碼→[樓]→門牌號碼[號]。
- * 當輸入數字按鈕時，按下[←]以從後面消除每個數字。

- * 通話持續時間長達60分鐘。
- * 如果對口有攝影機，對應的視訊將被顯示。

4 按下[]終止通話。



調整鈴聲和通話音量

當鈴聲響時鈴聲音量可以調節，及當電話通話中時通話音量可以調節。



音量控制可在0~7級之間調節

當社區內電話來電

 
1 鈴聲為社區內通話鈴響及社區內畫面會顯示在螢幕上。



2 按下[]。



3 開始通話中。

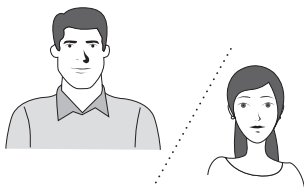

- * 通話持續時間長達60分鐘。

4 按下[]終止通話。



 
如何使用社區內通話

要使用最近通話紀錄

- 1 當按下主畫面的[社區內通話]時，社區通話畫面會顯示。
- 2 按下在數字鍵盤上的[▼]圖示來顯示最近通話紀錄。
- 3 從最近通話紀錄中選擇所需的號碼。



- 4 按下[☎]。
- 5 當接收到回應時，您就可開始電話交談。
- 6 按下[■]終止通話。

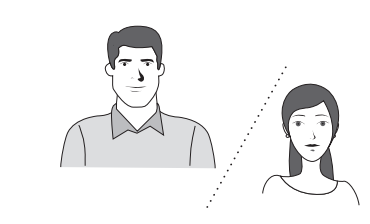


* 通話持續時間長達60分鐘。

* 如果對口有攝影機，對應的視訊將被顯示。

通話中，需將通話轉接到別的家庭時

 - 1 當來電鈴聲響，家庭通話畫面也將顯示。
- 2 按下[☎]。
- 3 開始通話中。

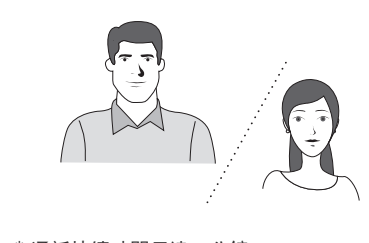

* 通話持續時間長達60分鐘。

- 4 輸入您想轉接通話之家庭的編號。
- 5 按下[☎]。
- 6 一旦轉接完成，就會自動結束通話。

 


如何使用管理室通話

※工作方式與保全管理室相同。

使用管理室通話

- 1 當按下主畫面的[管理室]時，社區通話畫面會顯示。
- 2 請用數字[0~9]、[管理室]鍵，輸入管理室或警衛室號碼後，再按下[]鍵。
- 3 當接收到回應時，您就可開始電話交談。

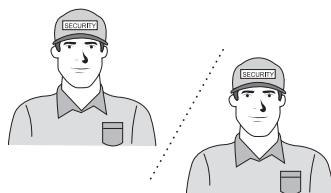


- 4 按下[]終止通話。



從管理室來電時

 - 1 管理室鈴響時及管理室通話畫面會顯示在螢幕上。
- 2 按下[]。
- 3 開始通話中。

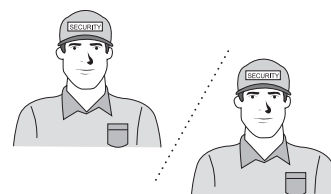

- 4 按下[]終止通話。



如何查看社區門口機

若要接通社區門口電話

1 按一下主畫面上的[社區門口]，則會顯示社區門口通話畫面。



2 請用數字[0~9]、[棟]鍵，輸入棟、室別後，再按下[]鍵。



3 隨即會出現社區門口視訊畫面，同時接通通話。



按下棟別數字 → [棟] → 室別數字即可。

* 最大通話時間為60分鐘。

* 如果您輸入的號碼不正確，您可以按一下 [←] 由右至左刪除號碼。

4 按下[]終止通話。



調整鈴聲和通話音量

當鈴聲響時鈴聲音量可以調節，及當電話通話中時通話音量可以調節。



音量控制可在0~7級之間調節

當訪客來到社區門口

 
1 社區門口鈴聲響起且訪客圖像顯示在螢幕上。



2 按下[]。



3 與訪客開始電話交談。

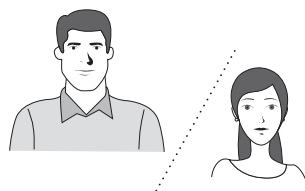

* 通話最長持續時間為1分鐘。

4 按下[]終止通話。



如何打開社區門口大門

- 當您按下螢幕上[開門]按鈕，您就可以打開社區門口大門。

通話記錄

65 正在檢查通話記錄

02

通話記錄

正在檢查通話記錄

若要檢查通話記錄

1 按一下主選單中的[]以顯示通話記錄。



2 它會顯示已接聽、已撥打或漏接的電話。



3 按下通話記錄中的[]按鈕可以撥打電話給所選的號碼。



* 按一下 [< / >] 以查看其他清單。

外出

67 如何設定外出

67 如何解除外出

03

外出

如何設定外出

設定外出

1 當按下主畫面[外出]，外出畫面會顯示。



2 使用[◀/▶]選擇其他聯繫方式，然後按下[確認]。



3 輸入您的密碼並按下[確認]。



* 若選擇[不使用密碼]，密碼輸入視窗不會顯示。(請參閱第73頁)

4 外出設定完畢後，將會顯示外出狀態視窗。



當錯誤發生在外出設定

- 當您因失誤接受到錯誤的警衛室，或者是網路連接錯誤，請檢查，當您輸入細節及再次輸入訊息會顯示什麼。顯示例句為：[請再檢查所輸入數字]或[請檢查您的網路狀態]。
- 所有的社區內通話因外出模式設定而將被轉接到設定的警衛室。發生緊急情況時，所有警衛室設定為接受，包括未參與的警衛室將被告知，在緊急情況下將顯示。

如何解除外出

解除外出

1 按下[]主畫面外出談出視窗。



2 點擊[是]，在外出彈出視窗撤消。



3 外出彈出視窗關閉及外出狀態關閉。



緊急訊息

69 警報接收功能

69 如何檢查居家緊急訊息

04

緊急訊息

警報接收功能

當警報情況報告

- 1 當警報狀況報告會出現相應的訊息及轉播狀況。
- 2 按下螢幕上的[確認]鍵。



* 關閉相應警報報告畫面。



如何檢查居家緊急訊息

檢查居家緊急訊息

- 1 按下主畫面上[緊急訊息]，緊急訊息畫面會顯示。
- 2 可以檢查居家緊急訊息。



* 如果有未檢查的緊急狀況警報，
[緊急]項目的編號將顯示在螢幕下方。
按一下[緊急]圖示以顯示緊急資訊。

* 點擊 [< / >] 以查看其他目錄。

配置設定

- 71 設置鈴聲
- 72 設置畫面
- 73 設置密碼
- 74 設定時間

05

配置設定

設置鈴聲

如何設置鈴聲/音量

1 按下主畫面[]，設定畫面會顯示。



2 按下[鈴聲]，鈴聲設定畫面會出現。



3 選擇所需的[鈴聲類型]。



4 使用[◀/▶]選擇鈴聲。



5 按下[◀/▶]及按下[儲存]來調節聲音音量。



* 您可以從21種鈴聲選擇。

* 鈴聲音量默認值為'3'。

* 當您按下[取消]圖示，設定將被取消。

設置畫面

如何設置畫面

1 按下主畫面[]，設定畫面會顯示。



2 按下[畫面]鍵，將會顯示畫面設置。



3 在畫面設置中，請選擇您欲變更之項目。



自动节电功能

按下[◀/▶]可調節液晶螢幕省電持續時間



* 當自動省電時間設定時，若沒有在設定時間內採取任何行動，螢幕會自動解除。

画面亮度

按下[◀/▶]可調節液晶螢幕亮度。



屏幕清洁

按下[螢幕清潔]鍵，觸控功能將被停止15秒，使液晶螢幕可清潔。



* 觸摸功能將在15秒後恢復正常。

触摸校准

按下[觸控螢幕校正設定]以觸控及校正液晶螢幕。



設置密碼

如何設定密碼

* 外出設定時需要密碼。

1 按下主畫面[]，設定畫面會顯示。



2 當按下[密碼]，密碼設定畫面會出現。



3 輸入密碼後，必須輸入相同數字確認。



* 您按下使用密碼時，必須輸入已登錄密碼，當您設定外出功能時。

4 按下[確認]，新變更的密碼將被儲存。



設定時間

若要設定時間

1 按下主畫面[]，設定畫面會顯示。



2 按一下[時間]以顯示時間設定畫面。



3 請按下日期或時間，設定現在時間。



4 按下[儲存]鍵，將會儲存設定事項。



實用訊息

76 產品訊息

76 欲了解更多訊息

06

實用訊息

產品訊息

產品規格

類別	單位	規格
電源供應器	V	DC 12V, 2.5A
操作溫度	°C	-10°C ~ +45°C
操作濕度	%	10% ~ 90 %
重量	公斤	1.07公斤
尺寸（寬x高x深）	毫米	255 x 141 x 133

欲了解更多訊息

〈網站〉

<https://homeiot.zigbang.com>

※ 本產品自購買之日起保固期限為一年。

Table of Contents

	Safety Precautions	78
00	Before You Read	
	Parts and Functions	81
01	Call Functions	
	How to Make an Intercom Call	84
	How to Make an Office Call	86
	How to View the Main Entrance	87
02	Call logs	
	Checking the call logs	89
03	Absence	
	How to Set Absence	91
	How to Turn Off Absence	91
04	Emergency Information	
	Alarm Receiving Function	93
	How to Check House Emergency Information	93
05	How to Configure Settings	
	How to Set Ringtones	95
	How to Set the Screen	96
	How to Set Password	97
	How to Set the Time	98
06	Useful Information	
	Product Information	100
	For More Information	100
	Product Warranty	101

Safety Precautions

Warnings and Cautions

Please first read the information below to ensure proper usage of this product.



If instructions are not followed, this could result in injury to the user or potential damage to the property.



If instructions are not followed, this could possibly result in serious injury or user fatality.

Warning



Do not disassemble, install or repair this product on your own accord.

- Call the customer support center if you require assistance. Unauthorized handling could cause product malfunction, electric shock, and/ or fire.



Avoid product contact with other products that could emit heat, water, and humidity.

- This could result in a fire or malfunction.



Do not strike the product with hard objects.

- It could cause product malfunction, electric shock, and/ or fire.



Do not allow water or other liquids to enter the product.

- This could result in electric shock or fire.



If the product emits a peculiar noise, odor, and/ or smoke, immediately disconnect the adapter's AC cord from the back of the product, and then contact the service center.

- This could result in electric shock or fire.



Do not allow children to coil the handset cord around their neck.

- This could cause injury or death by suffocation.

Safety Precautions



Do not press buttons with sharp objects, and do not insert objects through the hole.

- This could result in electric shock or fire.



Do not use a wet towel, flammable alcohol, benzene or thinners to clean the product.

- This could result in electric shock or fire.

Cautions



Do not hit the monitor screen.

- This product has a touch screen monitor, and this could cause product malfunction or damage to the product when it is pressed hard.



Do not place strong magnetic generators near the product.

- If strong magnetic generators (e.g. a large TV, speaker) are placed near the product, the product could be degraded.

Before You Read

81 Parts and Functions

 
00

Before You Read


Parts and Functions

Main Body


Front View of the Handset

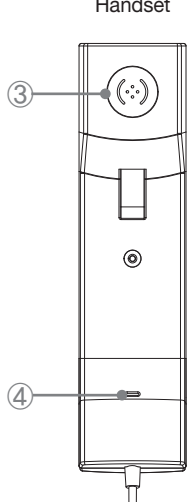

Front View of the Product

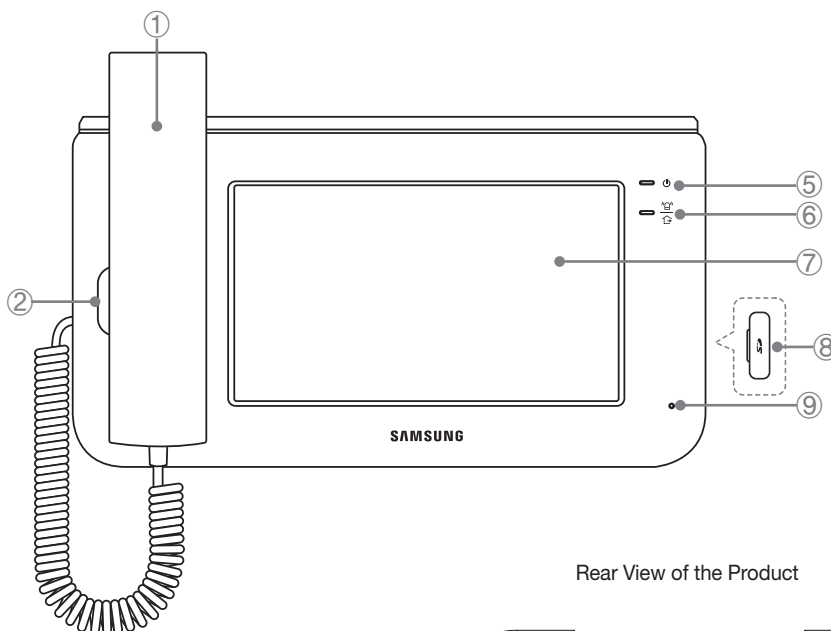 

Rear View of the Product

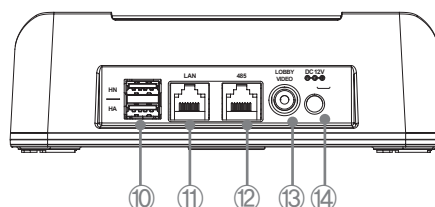 

- ※ The colors and patterns of this product are subject to change.
- ※ This product does not provide the SD card, or USB flash drive access.
- ※ The HA, HN, and LAN ports are not used by general users.

① Handset

Used to make a call.

② The Main Body Speaker

Used for visitor check, call and video calls.

③ Handset Speaker

Used for visitor check, call and video calls.

④ Microphone

Used for visitor check, call and video calls.

⑤ Power

Used to indicate the status of power supply.
(is on when the power supply is normal.)

⑥ Absence/Emergency

Lights up when absence mode is set, and flashes when a house emergency situation occurs.

⑦ LCD Screen (Touch Screen)

Used to display information and directly select, click, and execute the icons and buttons on the screen.

⑧ SD Card Terminal

⑨ Microphone

Used for visitor check, call and video calls.

⑩ USB Connection Terminal

⑪ LAN Connection Terminal

⑫ Unmanned Security System Connection Terminal

⑬ Unmanned Security System Main Entrance Video Input Terminal

⑭ Power Connector (DC 12V, 2.5A)

The Main Screen



Status Display Icons

	Indicates network connection status. (when there is a failure, it indicates it.)
--	--

Main Menu

	Intercom Call	Can make an intercom call.
	Office	You can make a call to the office.
	Notice	Can check the notice from the office.
	Absence	Absence status can be set and turned off.
	Emergency Information	Used to display the details of the emergency.

Shortcuts

	Call log	You can check received, sent, and missed calls.
	How to Configure Settings	Used to set ringtones, screen and password.
	Guard1	To locate the security office in which the product is installed.
	Emergency 0	It displays the details of an emergency that was not checked.

Call Functions

- 84 How to Make an Intercom Call
- 86 How to Make an Office Call
- 87 How to View the Main Entrance

01

Call Functions

How to Make an Intercom Call

To Make an Intercom Call

 
1 The intercom call screen will be displayed when clicking [Intercom] on the main screen.



2 Click [] after entering building, house number by selecting numbers [0~9], [Building] and [House].



3 When the receiver answers, you can start a phone conversation.

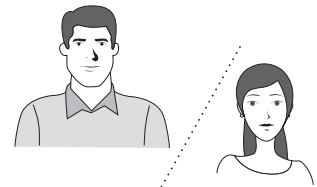

- * Press the icons this order: Building number → [Building] → House Number [House].
- * When entering with the number buttons, click [←] to erase a number each from the end.

 
- * Call duration is up to 60 minutes.
- * If the counterpart's system has a camera, the counterpart's video will be displayed.

4 Click [] to terminate the call.



To Adjust the Ringtone and Call Volume

Bell sound volume can be adjusted while the bell rings, and talk volume can be adjusted while talking on the phone.



Volume control can be adjusted in 0~7 sound degrees.

When an Intercom Call Comes

 
1 Ringtone for the intercom rings, and the intercom screen is displayed on the screen.



2 Click [].



3 Start a phone conversation.

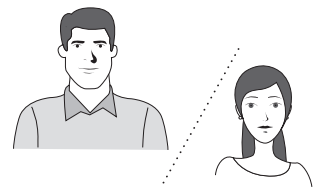

- * Call duration is up to 60 minutes.

 
4 Click [] to terminate the call.



How to Make an Intercom Call

To Call Using Recent Call Log


- 1 The intercom call screen will be displayed when clicking the [Intercom] on the main screen.
- 2 Click the [☑] icon on the number pad to display a list of recent call logs.
- 3 Select the desired number from the recent call logs.
- 4 Click [📞].
- 5 When the receiver answers, you can start a phone conversation.
- 6 Click [📞] to terminate the call.

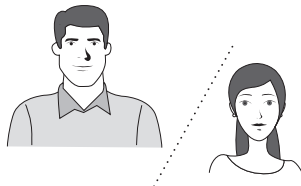


- * Call duration is up to 60 minutes.
- * If the counter part's system has a camera, the counterpart's video will be displayed.

To Transfer a Call to a Household While Having a Conversation with Another Household

 - 1 The household call screen appears when a call is received from a household.
- 2 Click [📞].
- 3 Start a phone conversation.
- 4 Enter the number for the household to which you want to transfer the call.
- 5 Click [📞].
- 6 Once the transfer is complete, the call ends automatically.

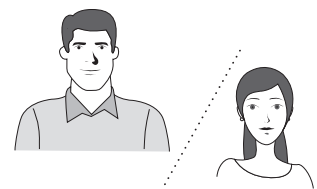

- * Call duration is up to 60 minutes.

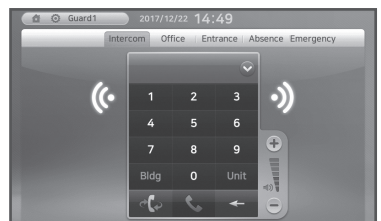 


How to Make an Office Call

※ Utilized the same as for the security office.

To Make an Office Call

 - 1 The intercom call screen will be displayed when clicking the [Office] on the main screen.
- 2 Click the office or guard number by using numbers (0-9) and [Office], and the [] button.
- 3 When the receiver answers, you can start a phone conversation.

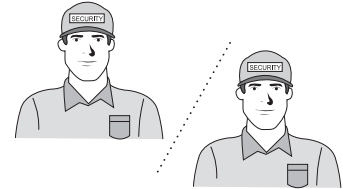


- 4 Click [] to terminate the call.



When a Call Comes from the Office

 - 1 Office bell rings, and the office call screen is displayed on the screen.
- 2 Click [].
- 3 Start a phone conversation.

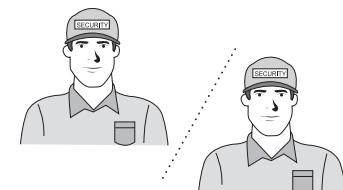

- 4 Click [] to terminate the call.



How to View the Main Entrance

To Place a Call to the Main Entrance

- 1 Click [Main Entrance] on the home screen to display the main entrance call screen.
- 2 Click the building and unit by using numbers (0-9) and [Building], and the [] button.
- 3 The main entrance video appears and the call is connected.



* Click the building number → the [Building] and → the unit number.

* Maximum duration of a call is 60 minutes.

* If you enter an incorrect number, you can click [→] to delete the number from right to left.

- 4 Click [] to terminate the call.



To Adjust the Ringtone and Call Volume

Bell sound volume can be adjusted while the bell rings, and talk volume can be adjusted while talking on the phone.



 
Adjusting the volume high

Adjusting the volume low

Volume control can be adjusted in 0~7 sound degrees.

When a Visitor Comes at the Main Entrance

- 1 Main entrance bell rings, and the visitor's view appears on the screen.
- 2 Click [].
- 3 Can start a phone conversation with the visitor.

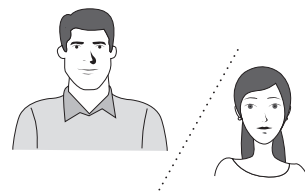

* Maximum duration of a call is 1 minute.

- 4 Click [] to terminate the call.



How to Open the Main Entrance Door

- You can open the main entrance door when you press the [Open] button on the screen.

Call logs

89 Checking the call logs

02

Call logs

 
Checking the call logs

To check the call logs


1 Click [] in the main menu to display call logs.



2 It displays received, sent, or missed calls.

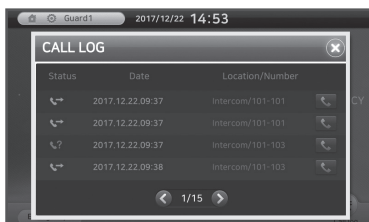

 3 Press the [] button in the call logs to make a phone call to the selected number.

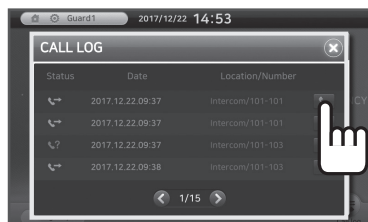

* Click [< / >] to check the other lists.

Absence

91 How to Set Absence

91 How to Turn Off Absence

03

Absence

How to Set Absence

 
To Set Absence

- 1 The Absence screen will be displayed when clicking [Absence] on the main screen.
- 2 Choose alternative contact using [◀/▶] and click [OK].
- 3 Enter your password and click [OK].



* The password entry window would not be displayed if "Deactivate Password" is selected (refer to page 97)

- 4 Once the absence is completely set, the absence pop-up screen is displayed.

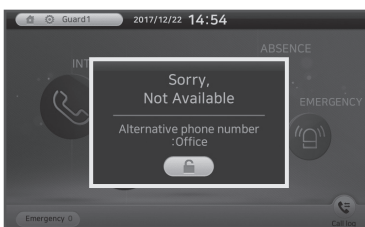


When an Error Occurs on Absence Setting

- When you connect to the wrong security office by mistake, or there is a network connection error, please check what is displayed when you enter the details, and enter the information again. Sample statements to be displayed are; "Please check the entered numbers again." or "Please check your network status."
- All the intercom calls coming while the absence mode is set will be forwarded to the set security office. However, when an emergency occurs, all the security offices set to be connected including non-attended security offices will be informed and the emergency case will be displayed.

How to Turn Off Absence

To Turn Off Absence

 - 1 Click [OK] on the pop-up window of the Absence on the main screen.
- 2 Click [YES] on the pop-up window for the absence deactivation.
- 3 Absence pop-up window is closed and the absence status is turned off.

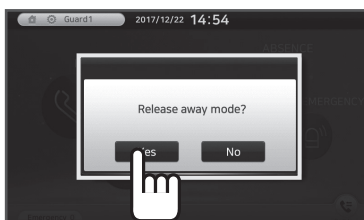

Emergency Information

93 Alarm Receiving Function

93 How to Check House
Emergency Information

04

Emergency Information

Alarm Receiving Functions

When an Alarm Situation Is Reported

 
- 1

When an alarm situation is reported, a respective message appears and the situation will be broadcasted.
- 2

Press the [OK] button on the screen.



* Close the respective alarm report screen.

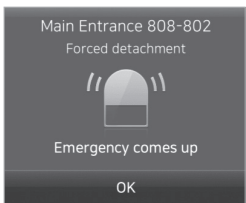


How to Check House Emergency Information

To Check House Emergency Information

- 1

Emergency information screen will be displayed when [Emergency Information] on the main screen is clicked.
- 2

 Can check the house emergency information.

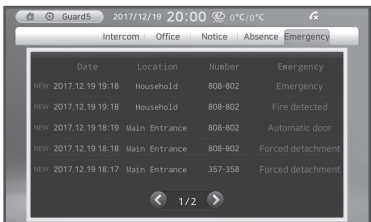

* If there are unchecked emergency alerts, the number of “emergency” items will display in the bottom of the screen. Click the [Emergency] icon to display emergency information.

* Other lists can be viewed by clicking [< / >].

How to Configure Settings

95 How to Set Ringtones

96 How to Set the Screen

97 How to Set Password

98 How to Set the Time

05

How to Configure Settings

How to Set Ringtones

How To Set Ringtones/Volume

- 1 The setting screen will be displayed when [] on the main screen is clicked.
- 2 The ringtone setup screen will appear when [Ringtone] is clicked.
- 3 Select the desired "Ringtone Type".



- 4 Choose a ringtone using [ / ].
- 5 Adjust the volume of sound clicking [ / ] and press [SAVE].



* You can select from 21 ringtones.

* The default value of ringtone volume is '3'.

* When you click the [Cancel] icon, the settings will be canceled.

How to Set the Screen

 
How to Set the Screen

- 1 The setting screen will be displayed when [] on the main screen is clicked.
- 2 Click [Screen] to display the screen setting.
- 3 Select an item to change from the Setting menu.



Power-saving

Adjust the power-saving duration of LCD screen clicking [ / ].

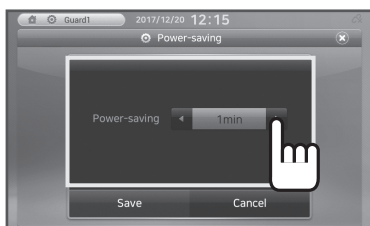

* The screen will turn off automatically if no action is taken within the set time while "Automatic Power-save Time" is set.

Brightness

Adjust the brightness of LCD screen clicking [ / ].



Clean Screen

 
When [Clean Screen] is pressed, the touch feature will be stopped for 15 seconds so that the LCD screen can be cleaned.



* The touch function will be returned to normal after 15 seconds.

Touch Calibration

Click [Touch Correction] to touch and calibrate LCD screen.

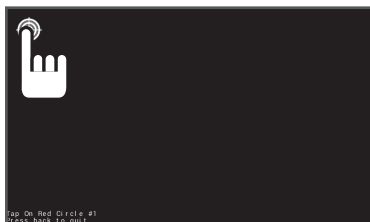

How to Set Password

 
To Set a Password

※ Password is used when Absence is set.

1 The setting screen will be displayed when [] on the main screen is clicked.



2 The password setup screen will appear when [Password] is clicked.

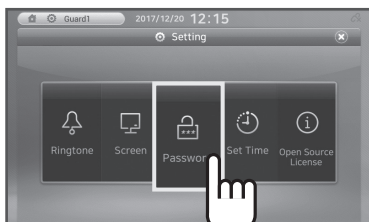

3 After the password is entered, the same number must be entered to confirm.



* When you click to use a password, you must enter the password registered when you are setting the Absence function.

4 The newly changed password will be saved when [OK] is clicked.

 


* When you click [Cancel], the settings will be canceled.


How to Set the Time

To Set the Time

- 1 The setting screen will be displayed when [] on the main screen is clicked.
- 2 Click [Time] to display the time settings screen.
- 3 Click Date or Time to set the current time.

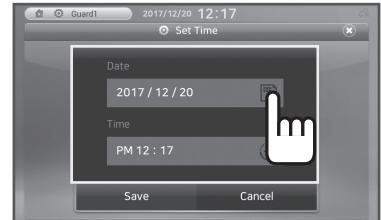

 - 4 Click the [Save] button to save the setting.

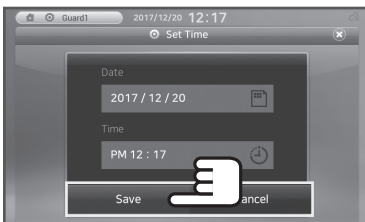

Useful Information

100 Product Information

100 For More Information

101 Product Warranty

06

Useful Information

Product Information

Product Specifications

Category	Unit	Specification
Power Supply	V	DC 12V, 2.5A
Operating Temperature	°C	-10°C ~ +45°C
Operating Humidity	%	10% ~ 90 %
Weight	Kg	1.07Kg
Size (Width X Height X Depth)	mm	255 x 141 x 133

For More Information

<Web Site>
<https://homeiot.zigbang.com>

※ This product warranty period is one year from the date of purchase.

LIMITED PRODUCT WARRANTY

Installation of the product is considered acceptance of warranty conditions

ZIGBANG Co., Ltd. warrants its products to be free from manufacturing defects in materials and workmanship for 12 months from the date of purchase. ZIGBANG Co., Ltd. will, within said period, at its option, repair or replace any product failing to operate correctly with away charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. ZIGBANG Co., Ltd. does not warrant the performance or sale conditions of the seller/installer.

There are no warranties, express or implied, which extend beyond the description on the face hereof. There is no express or implied warranty of merchantability or a warranty of fitness for a particular purpose. Additionally, this warranty is in lieu of all other obligations or liabilities on the part of ZIGBANG Co., Ltd..

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period. In no case shall ZIGBANG Co., Ltd. be liable to anyone for any consequential or incidental damages for breach or this or any other warranty, express or implied, even if the loss or damage is caused by the seller's own negligence or fault.

ZIGBANG Co., Ltd. shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. ZIGBANG Co., Ltd. and its distributor will not be responsible for any dismantling, reassembly or reinstallation charges. This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. ZIGBANG Co., Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products. In no event shall ZIGBANG Co., Ltd. be liable for an amount in excess of ZIGBANG Co., Ltd. original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising away of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow away of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

ZIGBANG Co., Ltd. recommends that the entire system be completely tested.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. ZIGBANG Co., Ltd. does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur.





Consequently, seller shall have no liability for any personal injury, property damage, or other loss based on a claim the product failed to give warning.

Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and CALLING police or fire department, in order to mitigate the possibilities of harm and/or damage. ZIGBANG Co., Ltd. is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to ZIGBANG Co., Ltd. original selling price of the product regardless of the cause of such loss or damage.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

In case of the product defect, contact our authorized Customer Service Center. In order to exercise the warranty, you must contact our authorized Customer Service Center and obtain a proper RMA # - the product must be returned to our authorized Customer Service Center at user's shipping expense and the replacement product will be shipped back at our expense.

For product service, the product in all cases must be accompanied by below warranty form. Customer must ask the reseller or installer to fill away the warranty form indicated below, otherwise the product warranty may be considered void.

Visit our website at <https://homeiot.zigbang.com> and go to Support menu to find the contact information of our worldwide distributors.

Date of Purchase or Installation : _____ (MM/DD/YY)

Name, phone number and full address of purchaser : _____

Stamp or Signature of authorized reseller / installer

Product Code and Serial Number :



