

SHP-DR718

User Manual

Samsung SDS

Digital Door Lock

Smart Opening (p.5, 18)

When a user accesses a door lock in a house, the access is detected in a smart way for convenient opening.

WiFi Function (p.12, 19)

App based user service using the WiFi function

Silent Mode (p.4)

When entering or exiting, the sounds from the keypad and doorlock will be muted.

Double Authorization Function (p.15)

Both a password and a fingerprint are required to unlock your door lock, to strengthen its security.

Welcome Function (p.13, 14)

When a user approaches the door lock, the authorization standby mode will automatically activate.

Security Assurance Function (p.21)

When someone is inside the house, authorization for entry from the outside will be prohibited.

Away Security Function (p.22)


When a user is out of the house, if the inside of the door lock is used, an alarm is triggered.

High Temperature Alarm (p.22)

If the inside of a house has a very high temperature, the door lock will be automatically unlocked.

Voice Guide (p.17)

Guides each action by voice.

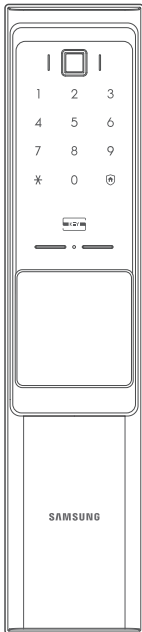
smarthome.samsungsds.com

Safety Precautions



Warning

This section contains important information to ensure the user's safety and prevent potential damage to property. Please, read this section carefully and use the product accordingly.


- The installation and repair should be done by the professional installer or service person.
- Do not install the product in the place where the gap between the door and the frame is 5 mm or more.
- Long-term exposure to direct sunlight may cause a crack on its touch pad. Avoid exposure to direct sunlight.
- Do not use the excessive force or sharp objects to push the lock buttons, as this can damage the product.
- Do not operate the product with wet hands, and keep liquids such as water or drinks away from the product, or the product may malfunction or be damaged.
- Do not use water, benzene or alcohol when cleaning the product, but use a soft dry cloth.
- Make sure that the door is completely closed when going outside.
- Make sure that no unauthorized person has the access to the password. Change it regularly.
- Be sure to correctly match the battery polarities (+/-) when installing the batteries. Wrong direction of battery polarities may cause the battery liquid leakage or the burst of them.
- When the battery replacement alarm melody is generated, use all new batteries instead of the existing batteries.
- According to the wireless communication environment, its battery may consume much.
- Interference in wireless communication may occur when this product is used, or radio interference may occur from other devices.
- As this radio system may have radio interference during the operation, it cannot provide a service for human lives.
- Too much dew condensation may affect the performance of this product.
- Keep 20 cm or longer away from this product when using it.

※ The information of this user manual is subject to change without any notices to improve the performance of this product.


※ Customer's improper installation may result in an additional service costs. We highly recommend professional installation.

Product Components


The product components may vary depending on the installation environment.

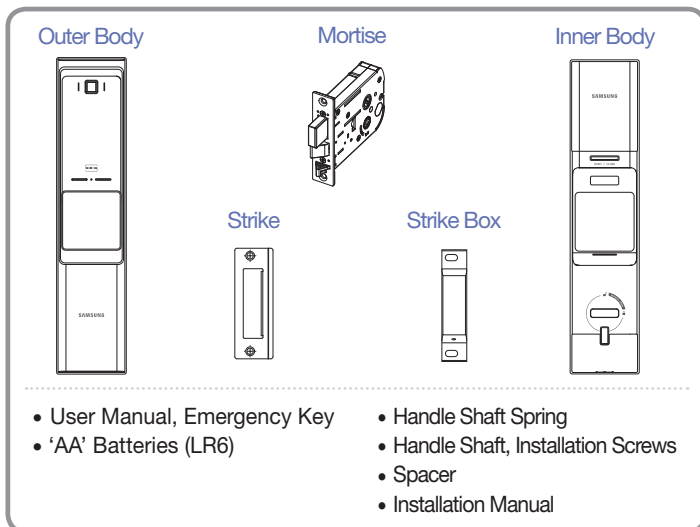


Outer Body Parts

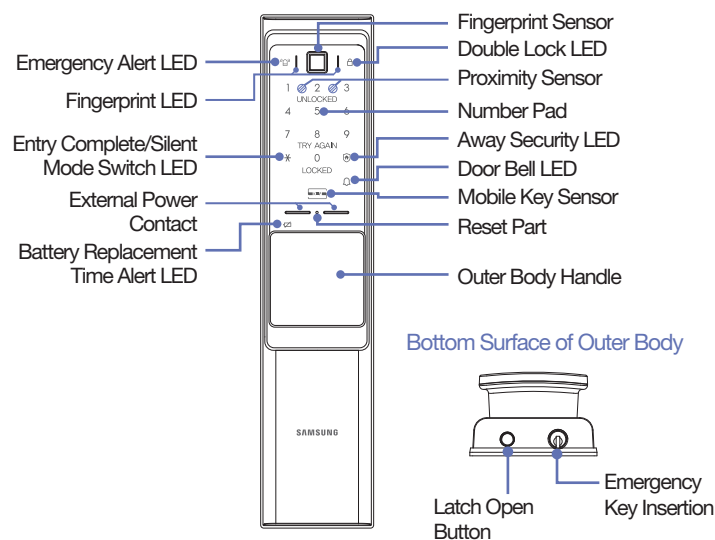

Inner Body Parts

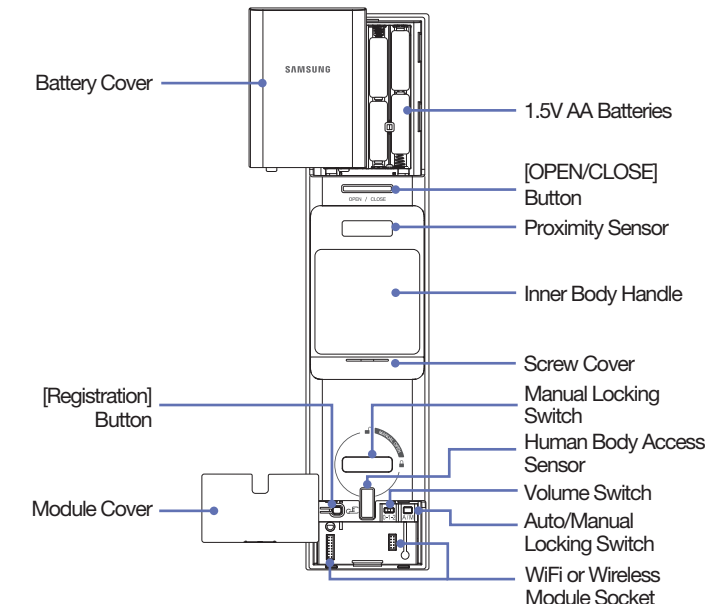

Mortise

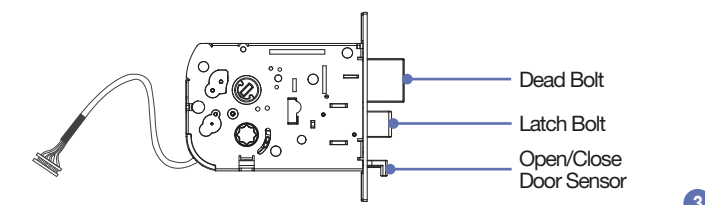

Opening the Door from Outside (Master/User Password)


When purchased, the product is set to Multi-leveled Security Code Entry Mode initially. Please, refer to 'Multi-leveled Security Code Entry Mode setting' for Common Mode setting.

※ Silent Mode

Before entering the master/user password, press the [*] button and enter the master/user password, then both the sound of the key entering and the door opening will be muted. It is a useful function if you do not want to disturb neighbors when you go in and out at night.


1. Multi-leveled Security Code Entry Mode

Accessing the door lock or touching the number pad (in the Welcome Function mode) will light up the number pad.

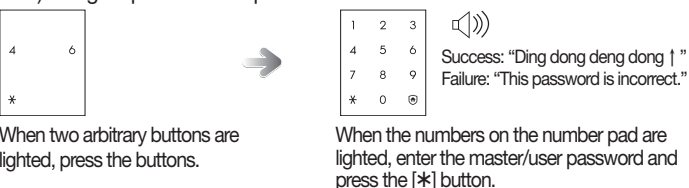

2. Common Mode

 
Accessing the door lock or touching the number pad (in the Welcome Function mode) will light up the number pad.



- Master/User password must be entered after the light is on. If not, touch the number pad and re-enter the password.
- To cancel the password entry, press the [⏏] button and re-enter the password.
- If the password is wrong 5 times, the "You entered the wrong information five times." alarm will sound. In about 10 seconds, the "The input block mode will be activated for three minutes." alarm will sound, and the system will shut-down for about 3 minutes. If the correct password is entered before the 3-minute entry block mode alarm is generated, the entry block mode will not be activated.


Opening the Door from Outside (Fingerprint)

 A locked door can be opened from outside by using a fingerprint. Place the registered fingerprint on the fingerprint sensor.



Opening the Door from Outside (Mobile Key)

A locked door can be opened from outside by using a mobile key. Place the mobile key issued through WiFi on the mobile key sensor.

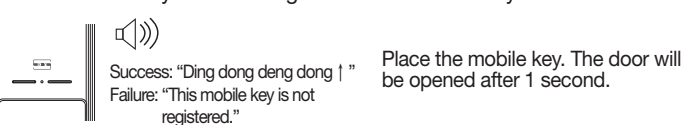


- When the Welcome function is deactivated, touch the number pad to open the door.
- A mobile key can be used after a user subscribes to the service through WiFi. For details, refer to the App guide.
- Opening the door with Mobile Key is available only for NFC enabled Android terminals and NFC USIM chip users.


Opening the Door from the Inside

You can open the door indoors by using your preferred way. 'Door opening by smart detection,' a way of automatically opening the door, can be turned off in the start detection setting function.


[Automatic Door Opening] Smart Detection

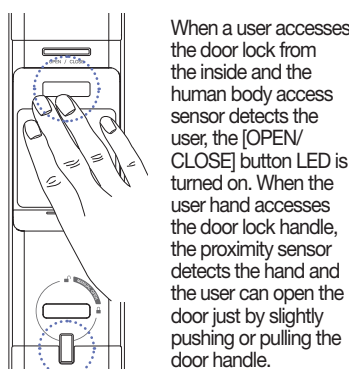

 [Manual Door Opening] [OPEN/CLOSE] Button



Manual Locking Switch

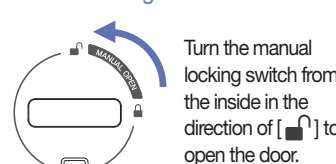

- If you are away from the human body access sensor and the proximity sensor, the door may not be opened. In this case, press the [OPEN/CLOSE] button to manually open the door.
- It is not recommended to use the smart detection function because the sensor continues to detect a thing if the object accesses the inner body ([OPEN/CLOSE] LED is ON) left/right.

Locking the Door from the Inside

Automatic Locking Setting


The door is automatically locked 1 second after the door is closed.

Manual Locking Setting




Menu


Registration Mode

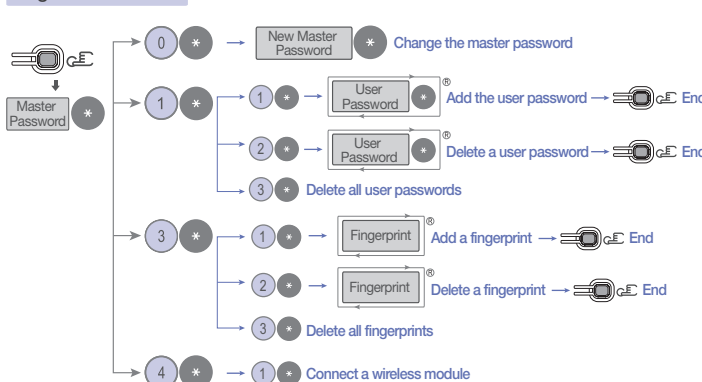

Setting Mode

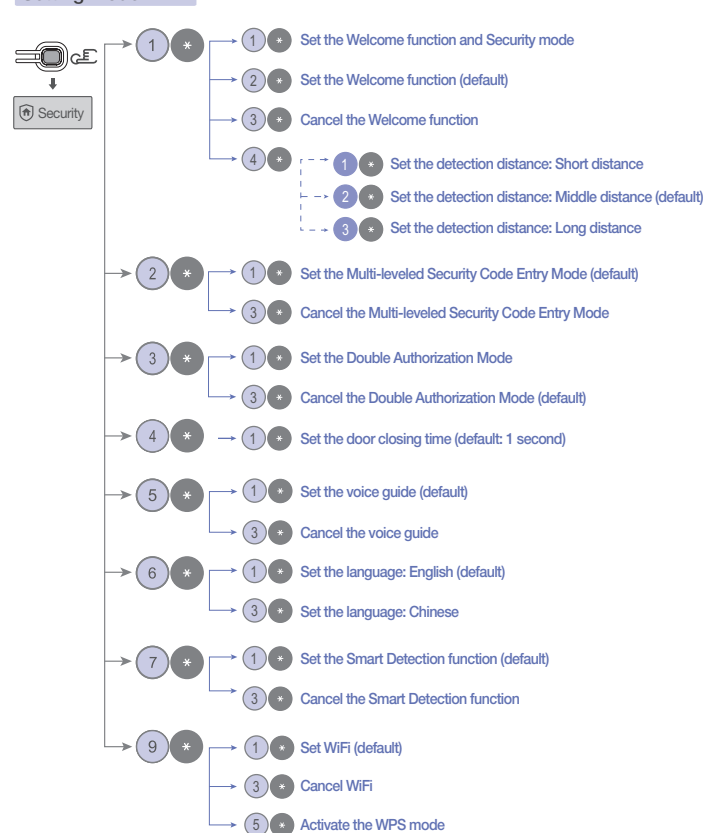

Initialization Mode

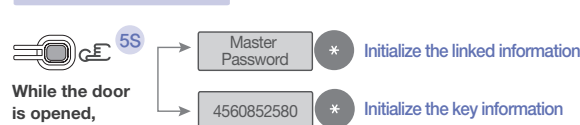


WiFi Registration Mode



While the door is closed,

Number pad Guide

The number pad of the door lock shows diverse settings.

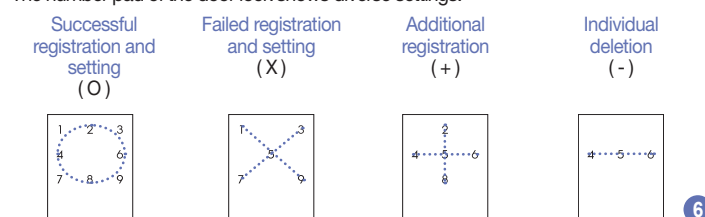

※ All registration and setting are activated only when the door is opened.
(WiFi connection is activated only when the door is closed.)

Registration Mode

A user can change a master password, or register and delete a user password or fingerprint or delete all user passwords or fingerprints.
In addition, a wireless connection can be registered as an option.
In the Registration mode, select a function.
(For the details of each function, refer to page 7-12.)

※ In the Registration mode, be careful that the door is not locked even though it is closed during the registration time (60 seconds). To cancel the Registration mode, press the Register button on the lower section of the inner body.

1. [Register] Button

“Ding dong” →
“Press the password and the asterisk sign to manage an authentication tool. Press the Security button for the environment setting. Press the Register button to end this process.”

Open the module cover on the lower section of the inner body and press the [Register] button shortly.

2. Existing Master Password

“Ding dong deng” →
“Press “0” and the asterisk sign to change a password. Press “1” and the asterisk sign to manage a user password. Press “3” and the asterisk sign to manage a fingerprint. Press “4” and the asterisk sign to set up a wireless connection.”

Press the existing master password and the [*] button.

Change the master password

A user can register a master password (4 to 12 digits), and only one master password can be registered. The default master password is “1234.”

1. Enter Registration Mode Select the Registration mode.
(Refer to the Registration mode.)

2. Select Master Password Change

“Password Change mode” →
“Press a new password and the asterisk sign.”

Press the [0] button.
- To hear the announcement again, press a number button before pressing the [*] button.

3. Press New Master Password

“Ding dong deng” →
Success: “It was changed.”
Failure: “Wrong information was entered.”

Press a new master password and the [*] button.

4. Check Changed Password

Press the [Register] button, the new password, and the [*] button, consecutively, and check if the Registration mode is accessed.

Warning

- To prevent an intrusion, it is recommended to make a password with 6 or more digits. (Each digit number ranges from 0 to 9.)
- Manage your master password with care so that unauthorized people will not have access to it. Regularly changing your password can reduce the risk of it being leaked.
- A registered master password cannot be deleted. Register a new master password.
- To make sure the password has been properly registered, check the new password and close the door.
- If checking the new password fails, initialize the key information (see page 12) to initialize the password, and change the password again.

7

Adding/ Deleting User Password/ Deleting All User Passwords

A user can register a user password (4 to 12 digits).
Up to 100 user passwords can be registered.
A user password registered can be deleted, or all user passwords can be deleted.

1. Enter Registration Mode Select the Registration mode.
(Refer to the Registration mode on page 7.)

2. Select User Password Management

“User Password Management mode” →
“Press “1” and the asterisk sign for additional registrations. Press “2” and the asterisk sign for individual deletions. Press “3” and the asterisk sign for all deletions.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

[Add a user password]

3. Select Additional Registration

“Additional Registration mode” →
“Press a user password and the asterisk sign.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

4. Press New User Password

“Ding dong deng” →
Success: “It is registered. If you need to register it more, press a new user password and the asterisk sign.”
Failure: “Wrong information was entered.” or “It already exists.”

Press a new user password and the [*] button.

5. Exit Registration Mode

If you want to end this process, press the [Register] button on the lower section of the inner body shortly.

[Delete a user password]

3. Select Individual Deletion

“Individual Deletion mode” →
“Press the user password and the asterisk sign.”

Press the [2] button.
- To hear the announcement again, press a number button before pressing the [*] button.

4. Press User Password to Delete

“Ding dong deng” →
Success: “It is deleted. If you need to delete more, press the user password and the asterisk sign.”
Failure: “This password is not registered.”

Press the user password registered and the [*] button.

5. Exit Registration Mode

If you want to end this process, press the [Register] button on the lower section of the inner body shortly.

[Delete all user passwords]

3. Select All Deletion

“All deletion mode” →
“Ding dong deng” → “All deleted.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Note

- Continuously, a user password can be registered or deleted. When a user enters a user password within 60 seconds after a new user password is registered or deleted, the registration or deletion continues to be performed.
- To make sure the password has been properly registered or deleted, check the password and close the door.

Adding/ Deleting Fingerprint/ Deleting All Fingerprints

Max 100 fingerprints can be registered.
A fingerprint registered can be deleted, or all fingerprints can be deleted.

1. Enter Registration Mode Select the Registration mode.
(Refer to the Registration mode on page 7.)

2. Select Fingerprint Management

“Fingerprint Management mode” →
“Press “1” and the asterisk sign for additional registrations. Press “2” and the asterisk sign for individual deletions. Press “3” and the asterisk sign for all deletions.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

[Add a fingerprint]

3. Select Additional Registration

“Additional Registration mode” →
“Input a new fingerprint three times to the fingerprint recognition part.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

4. Put a fingerprint to Add

“beep” →
“Ding dong deng” →
Success: “It is registered. If you need to register it more, input your fingerprint three times to the fingerprint recognition part.”
Failure: “Please try it again.”

Put a fingerprint to add to the fingerprint sensor.
(In registering your fingerprint, change its position gradually until it is recognized.)
When “beep” sound is generated and the recognition count is displayed on the number pad, remove the finger from the sensor and contact it again. (Total three times)

5. Exit Registration Mode

If you want to end this process, press the [Register] button on the lower section of the inner body shortly.

Note

- In registering your fingerprint, it is recommended to register your thumb or index finger.
- If the quality of the fingerprint image is bad, fingerprint registration may be refused.

[Delete a fingerprint]

3. Select Individual Deletion

“Individual Deletion mode” →
“Input the fingerprint to the fingerprint recognition part.”

Press the [2] button.
- To hear the announcement again, press a number button before pressing the [*] button.

4. Put the fingerprint to Delete

“Ding dong deng” →
Success: “It is deleted. If you need to delete more, input the fingerprint to the fingerprint recognition part.”
Failure: “Please try it again.”

Put the fingerprint to delete to the fingerprint sensor.

5. Exit Registration Mode

If you want to end this process, press the [Register] button on the lower section of the inner body shortly.

[Delete all fingerprints]

3. Select All Deletion

“All deletion mode” →
“Ding dong deng” → “All deleted.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Note

- Continuously, a fingerprint can be registered or deleted. When a user contacts a fingerprint within 60 seconds after a new fingerprint is registered or deleted, the registration or deletion continues to be performed.
- To make sure the password has been properly registered or deleted, check the password and close the door.

Managing Wireless Module

You can purchase a wireless module sold by Samsung and mount it into the wireless module socket. However, even though you purchase a proper Samsung wireless module, it may not be used in a model that does not support the module. Thus, please, contact the customer center before purchasing a wireless module to inquire the wireless module type of your model.

A WiFi module is mounted by default. If a WiFi module is re-mounted, refer to the mounting method.

1. Mount WiFi or Wireless Module

Open the battery cover and remove the batteries.
Open the module cover and mount a WiFi or Wireless module into the WiFi or Wireless module socket.
Insert the batteries and close the battery cover.

2. Enter Registration Mode Select the Registration mode.
(Refer to the Registration mode on page 7.)

3. Select Wireless Connection Setting

“Wireless module management mode” →
“Press “1” and the asterisk sign to manage a wireless module.”

Press the [4] button.
- To hear the announcement again, press a number button before pressing the [*] button.

[Wireless module connection/disconnection]

4. Enter Connection/Disconnection Mode from Controller

The Connection/Disconnection mode is activated from the controller.
(Refer to the user manual of the controller.)

5. Select Wireless Module Management

“Wireless Module Management mode” →
“A wireless module is being set up.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

6. Wireless Module Connection

“Ding dong deng” →
Success: “It was normally processed.”
Failure: “Failed.”

The wireless module is connected.

Warning

- A wireless module not sold by Samsung cannot be arbitrarily connected and used.
- For the wireless module, it may be impossible to purchase depending on the situation by country.
- When a wireless module is linked, up to 20 user passwords can be registered. (Only for Zigbee / Z-wave module)

11

Register a WiFi

When connecting a WiFi, a user can use App based various user services through WiFi.

WiFi connection is activated only when the door is closed.
(WiFi band: 2.4 GHz)

App Installation and Use

Install the ‘**Samsung Smart Doorlock**’ app from Google Play/App Store.
(Chinese users can install the Android app from Baidu, Tencent, or Qihoo360.)
After becoming a member, a WiFi can be connected.
- For the information on the registration and the use method, refer to the guide provided from the app.

Note

- A WiFi module is mounted by default. If a WiFi module is mounted again, refer to the installation method on page 11.

Initialization

All registered data are deleted.

1. Press and Hold [Register] Button

“Ding dong” → “Ding ding” →
“Press the password and the asterisk sign for interworking initialization. Press “4560852580” and the asterisk sign for the initialization of the key information.”

While the door is opened, Open the module cover on the lower section of the inner body and press the [Register] button for 5 seconds.

[Initialize the linked information]

• WiFi linkage: Initialize the mobile key and WiFi registration information.
- The master/user passwords and the fingerprint information are maintained.

2. Enter Master Password

Success: “The reset has been completed.”
Failure: “Wrong information was entered.”

When the number pad is lighted, enter the master password and press the [*] button.

[Initialize the key information]

The master/user passwords and the fingerprint information can be initialized.

• WiFi linkage: The mobile key is initialized and the WiFi registration information is maintained.

2. Enter Initialization Number of Key Information.

Success: “The reset has been completed.”
Failure: “Wrong information was entered.”

When the number pad is lighted, enter “4560852580” and press the [*] button.


Setting Mode

GC68-02351A ED:01


You can set various functions of the door lock. In the Setting mode, select a function. (For the details of each function, refer to page 13-19.)

※ In the Setting mode, be careful that the door is not locked even though it is closed during the setting time (60 seconds). To cancel the Setting mode, press the Register button on the lower section of the inner body.

1. [Register] Button




“Ding dong” —
“Press the password and the asterisk sign to manage an authentication tool.
Press the Security button for the environment setting. Press the Register button to end this process.”




Open the module cover on the lower section of the inner body, and press the [Register] button shortly.

1. [Security] Button

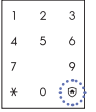

“Setting mode.
Press “1” and the asterisk sign for the Welcome function. Press “2” and the asterisk sign for the Randomizer. Press “3” and the asterisk sign for the Dual authentication. Press “4” and the asterisk sign for the Door close time. Press “5” and the asterisk sign for the Voice guidance. Press “6” and the asterisk sign for Language. Press “7” and the asterisk sign for the Smart detector. Press “9” and the asterisk sign for Wi-Fi.”

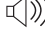

Press the [6] button.


Welcome Function

When a user approaches a door lock, the door lock gets automatically in the authentication standby status even though the user does not touch the number pad or the fingerprint authentication part. By default, the Welcome function is set, and the Security mode is deactivated. In addition, the detection distance is set to Middle distance.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode.)

2. Select Welcome Function Setting Mode

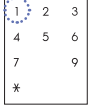

“Welcome Function Setting mode”

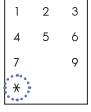

“Press “1” and the asterisk sign to activate the welcome function and the security mode. Press “2” and the asterisk sign to activate the welcome function. Press “3” and the asterisk sign to deactivate the welcome function. Press “4” and the asterisk sign to set the identification range.”


Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


[Set the welcome function and the security mode]

- Welcome function setting: When a user approaches to the door lock, the authorization standby mode will automatically activate.
- Security mode setting: When someone is in front of the door lock for a minute or longer, an alarm sound is generated.

3. Set the welcome function and the security mode



“Welcome function and Security mode setting”

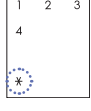

“Ding dong deng” → “It is set.”


Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


13

[Set the welcome function and deactivate the security mode]

3. Select Welcome Function Setting and Security Mode Cancellation

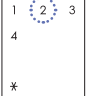

“It activates the welcome function.”

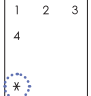

“Ding dong deng” → “It is set.”


Press the [2] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


[Deactivate the Welcome function]

- Welcome function deactivation Even though a user approaches a door lock, the door lock does not get automatically in the authentication standby status. Touch the number pad or contact your fingerprint the fingerprint authentication part to use the door lock.

3. Select Welcome Function Cancellation



“It deactivates the welcome function.”

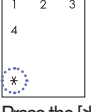

“Ding dong deng” → “It is deactivated.”


Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


[Set the detection distance]

A user can set the distance that can detect a user who approaches the door. (Short distance: About 40 cm, middle distance: About 60 cm, long distance: About 80 cm)

3. Select Detection Distance Setting

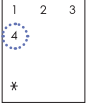

“Identification range setting mode”

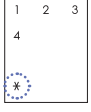


“Press “1” and the asterisk sign for a close range. Press “2” and the asterisk sign for a middle range. Press “3” and the asterisk sign for a long range.”

Press the [4] button.
- To hear the announcement again, press a number button before pressing the [*] button.


Press the [*] button.

4. Set Detection Distance

- Select the short distance setting

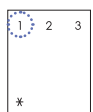


“It is set to a close range.”

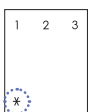


“Ding dong deng” → “It is set.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.
- Select the middle distance setting

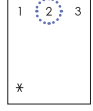


“It is set to a middle range.”

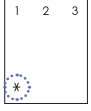


“Ding dong deng” → “It is set.”

Press the [2] button.
- To hear the announcement again, press a number button before pressing the [*] button.
- Select the long distance setting

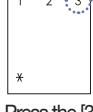

“It is set to a long range.”

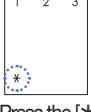


“Ding dong deng” → “It is set.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

14

Note

- The detection distance may change if the door lock is directly exposed to the sunlight or lighting.
- It is recommended to limitedly use the security mode setting because an alarm sound may be triggered in the case of row houses (or apartments) where lighting is always turned on or apartment houses of corridor access directly exposed to the sunlight.


Multi-Leveled Security Code Entry Mode

By pressing a password in order after two arbitrary numbers are inputted, a user can prevent password leak. By default, the multi-leveled security code entry mode is set.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode on page 13.)

2. Select Multi-Leveled Security Code Entry Mode Setting.

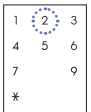

“Randomizer setting mode”

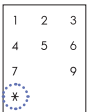


“Press “1” and the asterisk sign for activation. Press “3” and the asterisk sign for deactivation.”

Press the [2] button.
- To hear the announcement again, press a number button before pressing the [*] button.


Press the [*] button.

3. Select Activation/Deactivation

- Select the setting

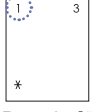


“Setting mode”

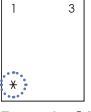


“Ding dong deng” → “It is set.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.
- Select the deactivation (common mode)



“Deactivation mode”

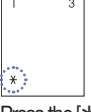

“Ding dong deng” → “It is deactivated.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

15


Double Authorization Mode

Double authorization mode requires both password and fingerprint to open the door, enhancing more security. To set the double authorization mode, one or more fingerprints need to be registered. When purchased, the door lock is not set to double authorization mode initially.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode on page 13.)

2. Select Double Authorization Mode.

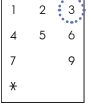

“Dual authentication setting mode”

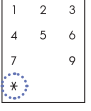

“Press “1” and the asterisk sign for activation. Press “3” and the asterisk sign for deactivation.”


Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


15

3. Select Activation/Deactivation

- Select the setting

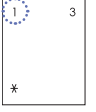

“Setting mode”

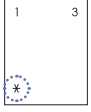


“Ding dong deng” → “It is set.”


Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

- Select the deactivation (common mode)

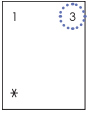

“Deactivation mode”

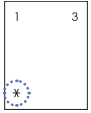

“Ding dong deng” → “It is deactivated.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


Door Lock Closing Time Setup Function

This function sets the delay time of the door lock locking after open/close door sensor detects the door. In an environment that the door closes slowly and the deadbolt jams before the door is fully closed, the situation can be fixed by adjusting the door lock closing time. By default, the door lock closing time is set to 1 second.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode on page 13.)

2. Select Door Lock Time Setting Mode

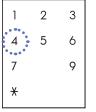

“Door closing time-setting mode”

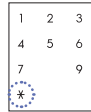


“Press “1” for one second and “2” for two seconds. Press a number from one to nine and the asterisk sign.”


Press the [4] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

3. Set Time



“It is set to 1 second.” ~ “It is set to 9 second.”

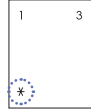

“Ding dong deng” → “It is set.”

Press [1] ~ [9] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

16


Voice Guide Setting

Door lock functions are guided by voice. By default, the voice guide is set.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode on page 13.)

2. Select Voice Guide Setting

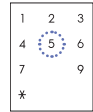

“Voice guidance setting mode”

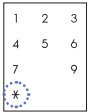


“Press “1” and the asterisk sign for activation. Press “3” and the asterisk sign for deactivation.”

Press the [5] button.
- To hear the announcement again, press a number button before pressing the [*] button.


Press the [*] button.

3. Select Activation/Deactivation

- Select the setting

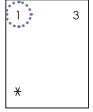

“Setting mode”

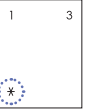


“Ding dong deng” → “It is set.”

Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.


Press the [*] button.

- Select the deactivation

Even though this voice guide is deactivated, if an abnormal/emergency situation occurs, an alarm sound is generated. The voice guide for the low voltage notification, security assurance mode, and away security mode are not deactivated.

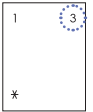

“Deactivation mode”

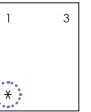

“Ding dong deng”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


Voice Language Setting

A user can select English or Chinese for voice guide. By default, the voice language is set to English.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode on page 13.)

2. Select Language Setting

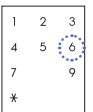

“Language setting mode”

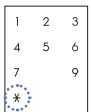

“Press “1” and the asterisk sign for English. Press “3” and the asterisk sign for Chinese.”


Press the [6] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


17

3. Select Language

- Select English

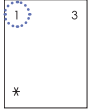

“English setting”

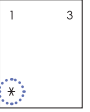


“Ding dong deng” → “It is set.”


Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

- Select Chinese

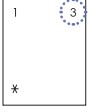

“Chinese setting”



“Ding dong deng” → “It is set.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.


Smart Detection Function

When a user accesses a door lock in a house, the door lock detects the access and the door is automatically opened. By default, the smart detection function is set.


1. Enter Setting Mode

Select the Setting mode. (Refer to the Setting mode on page 13.)

2. Select Smart Detection Setting Mode

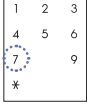

“Smart detector setting mode”

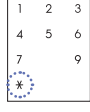


“Press “1” and the asterisk sign for activation. Press “3” and the asterisk sign for deactivation.”

Press the [7] button.
- To hear the announcement again, press a number button before pressing the [*] button.


Press the [*] button.

3. Select Activation/Deactivation

- Select the setting

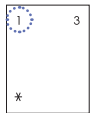

“Setting mode”

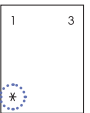


“Ding dong deng” → “It is set.”


Press the [1] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

- Select the deactivation

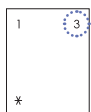

“Deactivation mode”

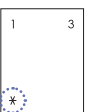

“Ding dong deng” → “It is deactivated.”

Press the [3] button.
- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

18

WiFi Use

By default, the WiFi Use is set.

1. Enter Setting Mode

Select the Setting mode.
(Refer to the Setting mode on page 13.)

2. Select WiFi Use Setting Mode

123
456
7
*

“Wi-Fi setting mode”

➔

123
456
7
*
9

“Press “1” and the asterisk sign for activation. Press “3” and the asterisk sign for deactivation. Press “5” and the asterisk sign for WPS mode.”

Press the [9] button.

- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

[Activation/Deactivation Wi-Fi Use]

3. Select Activation/Deactivation

- Select the setting

13
*

“Setting mode”

➔

13
*

“Ding dong deng”
→ “It is set.”

Press the [1] button.

- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

- Select the deactivation

13
*

“Deactivation mode”

➔

13
*

“Ding dong deng”
→ “It is deactivated.”

Press the [3] button.

- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

Note

- When WiFi Use is deactivated, a user cannot use various other services provided by the App.
- If you do not use the app, it is recommended to deactivate the use of WiFi.

[WPS mode]

When an AP is changed while a WiFi is used after its registration, this WPS mode allows convenient setting from the connection to the security setting without complex process. This mode can be used only when an AP supporting the WPS. For the information on how to use the WPS of an AP refer to the AP user manual.

3. Select WPS of Changed AP

Select the WPS of a changed AP.

4. Select WPS

13
5
*

“WPS mode”

➔

13
5
*
9

“The WPS mode is being activated.”

Press the [5] button.

- To hear the announcement again, press a number button before pressing the [*] button.

Press the [*] button.

19

5. Connect to AP

123
5
8
*0

“Ding dong deng” →
Success: “Doorlock is normally registered.
Please wait for a while.”
Failure: “Failed to set WiFi.
Please try it again from the beginning.”

The AP is being connected.

Note

- WPS: WiFi Protected Setup
- If an AP does not support the WPS, take the WiFi registration procedure again to use the changed AP.
- For the information on the WiFi registration, refer to the page 12.

Automatic/Manual Locking Setting

The Automatic Locking mode allows for automatic locking of the door when it is closed.

A I M

↔

Open the module cover of the inner body.
Set the [Automatic/Manual Locking] toggle switch of the inner body to A/M position.

Automatic

The door is automatically locked 1 second after the door is closed. If the battery low voltage voice message and an alarm sound are heard, replace the batteries. If the voltage of the door lock continues to be low, the door may not be locked.

Manual

- How to lock: The door does not automatically lock, and the [OPEN/CLOSE] button must be pressed from the inside or touch [number pad] to close the door.
- How to open the door (when only the latch is locked)
 - From the inside: The detection by the proximity sensor after the detection by the human body access sensor opens the door.
 - From the outside: When you access the door lock, the door bell LED[] turns on. Press the door bell LED[] to open the door.
Or, press the Latch Open button on the bottom surface of the outer body to open the door.

Note

- Regardless of the automatic/manual locking setting, the door will automatically lock 7 seconds after the door lock is unlocked if the door is not opened.

Volume Setting

The sound that is generated when the number buttons are pressed, when the door is locked, or when the locked door is unlocked, can be set according to the user's preference. When purchased, all sounds are set to be generated initially. (1 level)

0 - 1 - 2

Open the module cover of the inner body.
Set the [Sound Control] switch to [0]-[2].

- [0]: The sounds of door opening/closing and key touching are not deactivated (except an alarm sound).

- [1]-[2]: All sounds are activated, and the sounds get bigger as the step becomes higher.

20

Away Mode Activation/Deactivation

To prevent intrusion when a user goes out, this function generates an alarm sound when an attempt is made to forcefully open the door from the inside. In the Away mode, if someone tries to open the door from the inside, “beep-beep-” sound is generated for 5 minutes.

Away Mode Activation

“Away mode is activated.”

Once the door is locked, the [] button of the number pad is lighted.

Press the [] button within 3 seconds to activate the Away mode.

Away Mode Deactivation

Or

123
456
789
*0

Press the master/user password, touch a registered mobile key, recognize a fingerprint, or use WiFi, and open the door to deactivate the Away mode.

Intrusion Detection Function

This function triggers an alarm sound when an attempt is made to forcefully open the door from the inside or the outside. (It is a basic function, and cannot be activate/deactivated by the user.) If the door is forcefully opened while locked, the open/close door sensor detects it and triggers an alarm sound for 5 minutes.

Prank Prevention Function

This function triggers an alarm sound and deactivates lock operation when the door lock is improperly handled from the outside. If a fingerprint/mobile key that are not registered or a wrong password are used five times, an alarm sound is generated and the door lock is deactivated for 3 minutes.

Alarm Sound Deactivation

Open the module cover on the inner body and press the [Register] button, or open the battery cover and separate the batteries. Authenticate a registered fingerprint or mobile key or pressing the master/user password and press the [*] button.

High Temperature Alarm Function

If the room temperature abnormally increases, the temperature sensor detects it and an alarm is triggered. (It is a basic function, and cannot be activate/deactivated by the user.) This high temperature alarm function is activated at about 70 °C±10 °C. Depending on the installation environment, the temperature may be different.

When a high temperature occurs, the temperature sensor detects it. The LED of the [OPEN/CLOSE] button on the inner body flashes while an alarm sound is generated for 15 seconds. After the alarm sound stops, the door is automatically opened. (If the room temperature decreases to below a certain temperature, the door lock is normally operated.)

22

Door Bell Function

Approaching the door lock or touching the number pad (in the Welcome Function mode) when the door is closed will light up the number pad. Pressing the door bell LED in the number pad LED generates a bell sound to let a user in the house know there is a guest.

Security Assurance Mode Activation/Deactivation

This mode is to prevent opening the door from outside while someone is inside.

Security Assurance Mode Activation

OPEN / CLOSE

“Anti-picking mode is activated.”

Press the [OPEN / CLOSE] button on the indoor side for 3 seconds to prevent the door from opening with the smart detection while the door is locked.

Security Assurance Mode Deactivation

OPEN / CLOSE

Or

Briefly press the [OPEN/CLOSE] button on the inner body to deactivate it, or set the manual locking switch to [] to open the door. Or, use the smart detection function and open the door to deactivate it.

Security Assurance Mode Operation

“Anti-picking mode has been activated.”

Inside: Opening the door through WiFi generates the sound for action-unavailable.

Outside: Touch the [number pad], recognize the fingerprint, or touch with a mobile key to open the door. Then, the sound for action-unavailable is generated.

Note

- When the security assurance function is activated, the door cannot be unlocked from the outside, so please be careful. Be especially careful not to allow children to set this mode accidentally from the inside.

Emergency Key Use

An emergency key is used when the door lock does not work because the battery replacement time comes or a circuit is wrong. There is the emergency key hole on the emergency key insertion part on the bottom of the outer body. Insert the emergency key and turn the key to release the lock.

Warning

- One or more emergency keys must be stored outside the house or a user must carry them.
- If you lose an emergency key, it is recommended to replace the entire key cylinder body. (Replacing the entire key cylinder body is paid by a user.)

Caution against Sensor Malfunction

[Inner Body]

Proximity Sensor

Keep the sensor screen clean for smart detection to open the door.

- The door might not open if the sensor is dirty.

Certification and Standard

This product meets international communication standards and has acquired a radio communication certification. State Radio Regulation Committee (SRRC) CMIIT ID: (DR708) 2018DJ2803, (DR719) 2019DJ0234, (DR717) 2019DJ0252, (DR718) 2019DJ0253

RF standard

Item	Frequency	Radio Wave Type	Modulation	Communication	Use
RF device for RFID	13.56 MHz	A1D	ASK	Simplex	
RF device for wireless data communication system	2.4 GHz	IEEE 802.11 b/g/n	DSSS CCK OFDM	Semi-duplex	DC 6V (1.5V AA X 4EA)

Product Specifications

Item	Specifications	
Voltage	Four AA Alkaline 1.5 V batteries (LR6) (DC 6 V)	
Emergency Power Source	One 9 V battery (6LF22) (sold separately)	
Operation Method	Authentication method (password, fingerprint, NFC, WiFi)	
Weight	3.475 kg (including both inner and outer bodies)	
Product Dimensions (including the handle)	Outer Body	88mm (W) x 400mm (H) x 57.5mm (D)
	Inner Body	88mm (W) x 400mm (H) x 61.5mm (D)

23

24